

SENSIT[®] HXG-2d

COMBUSTIBLE GAS DETECTOR

INSTRUCTION MANUAL

Read and understand instructions before use.

Intrinsically Safe for Use in
Class I, Groups C and D, T3
Hazardous Locations



For use in clean dry areas only.


Suitable for combustible gases such as Methane, Butane,
Propane and Natural Gas




851 Transport Drive • Valparaiso, IN 46383 (USA)
Phone: 219.465.2700 • www.gasleaksensors.com

FOR YOUR SAFETY

NOTICE:

 **CAUTION:** This safety symbol is used to indicate a potentially hazardous situation which, if not avoided, may result in minor or moderate injury.

 **WARNING:** This safety symbol is used to indicate a potentially hazardous situation which, if not avoided, may result in serious injury.

 **WARNING:** Do not replace batteries when an explosive atmosphere is present.

 **WARNING:** Use only DURACELL® PROCELL, Type PC1400 Alkaline Batteries, or equivalent alkaline cells.


 **WARNING:** Do not mix old batteries with new batteries or mix battery types.


 **WARNING:** For use in clean dry areas only.

 **WARNING:** Not for use in atmospheres of oxygen greater than 21%.

 **WARNING:** Substitution of components may impair intrinsic safety.

 **WARNING:** ONLY zero instrument in a gas free environment.

 **WARNING:** To maintain intrinsic safety, service must be performed by factory authorized technicians with approved replacement parts only.

 **WARNING:** All Accessories are to be used in an area known to be non-flammable.

 **WARNING:** Use only sensor from **SENSIT Technologies**. PN 375-2611-01

NOTE: Performance/Accuracy aspects of this product have not been assessed and are not covered as a part of the SGS approval.

CONTENTS

FOR YOUR SAFETY	2
PARTS AND ACCESSORIES	4
GENERAL DESCRIPTION	5
SPECIFICATIONS.....	6
SENSOR SPECIFICATIONS.....	6
PRODUCT SPECIFICATIONS.....	6
PRODUCT FEATURES	7
SENSOR TYPE.....	9
COMBUSTIBLE GAS SENSOR.....	9
SENSOR FILTER REPLACEMENT / CLEANING	9
BASIC OPERATIONS	10
BATTERY INSTALLATION/REPLACEMENT	10
OPERATION AND USE	11
CALIBRATION CHECK.....	14
CALIBRATION.....	15
SENSOR REPLACEMENT	16
ADJUSTABLE FEATURES	17
OPTIONS MENU.....	18
HOW TO CONFIGURE FOR LEL OR PPM AND LEL DISPLAY	18
HOW TO CHANGE LEL ALARM POINT WITH PPM READINGS ON DISPLAY	18
HOW TO CHANGE LEL ALARM POINT WITH LEL READINGS ON DISPLAY.....	19
HOW TO CHANGE LEL ALARM POINT WITH LEL READINGS ON DISPLAY.....	19
HOW TO CHANGE PPM ALARM POINT WITH PPM READINGS ON DISPLAY	20
NOTES	21
WARRANTY	24

PARTS AND ACCESSORIES

STANDARD ACCESSORIES (INCLUDED)

360-00006	Soft Carrying Pouch
360-00105	T10 Torx Wrench
310-00004*	Duracell "C" Alkaline Battery (ea)
360-00040	Wrist Strap
750-00022	Instruction Manual

ACCESSORIES AND REPLACEMENT PARTS

375-2611-01	LEL Sensor
882-00036	Sensor Cap with Filter Disc
360-00203	Filter Disc Replacement
870-00012	Extension Adapter

CALIBRATION KITS

881-00017	Methane Calibration Kit
	2.5% Methane/Air (21L), Regulator, Hose
881-00073	Propane Calibration Kit
	1.1% Propane (21L), Regulator, Hose

REPLACEMENT GAS CYLINDERS

315-080012	2.5% Methane/Air (21L)
315-080022	1.1% Propane/Air (21L)

Contact Factory for additional options.

GENERAL DESCRIPTION

The **SENSIT® HXG-2d** is designed to detect combustible gases. This instrument incorporates an advanced low power semiconductor sensor to measure a wide variety of combustible gases in both the PPM and %LEL range. The PPM readings auto-range to %LEL when the concentration exceeds 990PPM (2%LEL methane or 4.5%LEL propane).

Optionally all readings can be set to a resolution of 0.1%LEL only (PPM off). An “on demand” backlight allows use in dark environments. A user activated “TICK” control assists in locating small gas leaks.

Audible and visual alarms warn the operator of hazards. The alarms can be set in either the PPM or LEL modes. The default alarm is 10%LEL methane/propane.

The instrument is adjusted at the factory for either methane or propane as the primary gas, and is calibrated accordingly. The primary gas can be selected when ordering.

The **SENSIT® HXG-2d** meets US UL913 requirements when used with approved batteries, or equivalent alkaline cells.

The **SENSIT® HXG-2d** is operated using approved alkaline batteries, or equivalent alkaline cells.



WARNING: Do not mix old batteries with new batteries or mix battery types.

SPECIFICATIONS

SENSOR SPECIFICATIONS

TYPE	RESOLUTION	RANGE	ACCURACY
PPM	10ppm	0-990ppm	±10%
LEL	0.1%	0-100%LEL	±10%

PRODUCT SPECIFICATIONS

Size:	10" x 3" x 1.6" (254 x 76 x 41 mm)
Weight:	1.2 lbs. (544 g)
Operational Temp:	-20° to 40° C (-4 to 104° F)
Battery Life:	Alkaline: 50 hours continuous

The **SENSIT® HXG-2d** meets US UL913 requirements when used with Duracell PC1400 batteries, or equivalent alkaline cells.



Intrinsically Safe for Use in Class I,
Groups C and D, T3 Hazardous Locations

For use in clean dry areas only.

PRODUCT FEATURES



PRODUCT FEATURES

SENSIT® HXG-2d instruments are constructed of durable high impact ABS to withstand the rigors of field use.

Incorporated in the hand grip area is the battery compartment. All **SENSIT® HXG-2d** instruments require 3. Duracell PC1400 batteries, or equivalent alkaline cells, provide approximately 50 hours of continuous use.

A push button located in the center of the instrument activates an audible tick sound that will help in locating the source of a gas leak. This tick is generated by using specialized circuitry in combination with the LEL sensor located at the end of the gooseneck assembly. The tick can be easily heard with the speaker located in the back of the instrument.

A flexible gooseneck is used to assist in locating the source of gas leaks and remote sampling.

The display continuously updates the operator of changes in gas concentrations and alerts of low battery power.

A green LED on the left side indicates the instrument is ready for use. A red LED indicates the preset alarm points have been exceeded.

There are 3 operational button pads on the front of all SENSIT® HXG-2d instruments.

BUTTON [A] POWER/MUTE

Operates the POWER and MUTE features and exit menu items.

BUTTON [B] TICK/CAL

Use to operate TICK or begin calibration.

BUTTON [C] LIGHT/ZERO

Use to turn on the backlight or manually zero the sensor.

SENSOR TYPE

COMBUSTIBLE GAS SENSOR

All **SENSIT® HXG-2d** instruments incorporate a highly sensitive semiconductor type sensor. The function and accuracy of the sensor are monitored and controlled by specialized circuitry and a microprocessor. This sensor is capable of measuring concentrations of 10ppm of methane/propane up to 100% LEL. Factory calibration uses methane or propane depending on preset gas type.. This sensor will detect many combustible gases.

SENSOR FILTER REPLACEMENT / CLEANING

Remove sensor cap by pressing retaining tab located on side of sensor and pulling the cap away from base. Filter will be loose inside. Clean filter with mild soap and water and thoroughly dry filter cap. Replace Cap/Filter on base until retaining tab engages.

NOTE: Operating the instrument without a sensor cap or with an altered sensor cap can cause damage to the instrument and void the warranty.

BASIC OPERATIONS

BATTERY INSTALLATION/REPLACEMENT

 **CAUTION:** Always change batteries in an environment free of combustible gases.

 **WARNING:** Do not mix old batteries with new batteries or mix battery types.

Battery replacement is necessary when the BAT icon is illuminated and the green LED is flashing. This warning indicates there is approximately 15 minutes or less operational time before the instrument turns off automatically due to insufficient battery power.


Remove the battery sleeve cover by removing the battery sleeve screw with a T-10 screwdriver. Depress the locking tab on the front of the handle with a coin or flat object and pull the battery sleeve handle away from the top or display area of the instrument.


Place 3 PC1400 or equivalent alkaline batteries into the battery holder. Observe the polarity markings on the inside of the battery holder for proper battery installation. Improper installation will cause the instrument not to operate.

Replace the battery sleeve and allow the locking tab to snap into position. Replace the battery sleeve retaining screw. Check to be sure the handle is secure to the instrument body by firmly pulling the handle away. The handle will remain in place if a proper connection is made.

OPERATION AND USE

 **CAUTION:** Always start any SENSIT® HXG-2d in a gas free environment to insure a proper zero.

1. Push and hold the power button  until the display and backlight illuminates.
2. If the display fails to illuminate or the BAT icon is shown on the display, replace the batteries.
3. During successful start-up the instrument will display:
 - a. Display all segments
 - b. Turn on and off the backlight
 - c. Display "S2d" as the model number
 - d. Cal Gas (CH₄ or PRO)
 - e. Display software version
 - f. Display "50.0%" or "10.0%" indicating the LEL Calibration point for the instrument for CH₄ gas type only.
 - g. Display "dIS" indicating display resolution of PPM / %LEL or both.
 - h. Display "AL" followed by the alarm set point.
 - i. Activate the alarm sound and red LED for 3 beeps
 - j. Continue to flash all segments until proper warm-up is attained (no more than five minutes)
 - k. Flash "Zro" indicating fresh air zeroing
 - l. Working display is shown

NOTE: A failure to properly zero due to the presence of gas is indicated by "bAd" + cal icon illuminated on the display. Pressing the ZERO  button for 6 seconds and releasing will restart the zeroing process.

NOTE: If a sensor is completely inoperable or improperly zeroed at start up, the display will show "bAd".

4. All instruments read with a resolution of 10ppm up to 990ppm. The scale automatically switch to LEL when 990ppm is exceeded with a resolution of 0.1% LEL.

Optionally all readings may be displayed in LEL only. Readings beyond 100% LEL are indicated by "OL" (overload).

5. It may be necessary to manually zero the instrument based on company practices and environmental conditions.

 **CAUTION: Zeroing should be done in a gas free environment only.**



6. When testing high areas or overhead lines the use of the optional extension adapter will allow a broom handle or painters stick to extend the instrument to the area where sensing must be accomplished. This slides onto the battery sleeve and is held in place by the locking nut assembly.
7. When a gas is sensed the display will update. If an alarm condition exists, based on a preset alarm point, the red LED will flash and the alarm will sound.
8. During an alarm condition (factory default at 10% LEL methane) the display will flash and an audible alarm will sound indicating a potentially unsafe environment. To disable the audible alarm press and release the MUTE button **[A]**. To enable the alarm press and release it again.

NOTE: These instruments have cross sensitivities to a variety of gases.

9. To assist in locating the source of small combustible gas leaks or surveying areas outdoors or indoors, press and release the TICK/CAL button **[B]**. This will start an audible tick preset at 2-3 ticks per second.

Move the sensor toward the area suspected of leakage. As the sensor moves closer to a leak source the tick will increase. When the tick becomes a steady tone press the TICK/CAL button **[B]** again while keeping the sensor head in the same position. This will slow down the tick and allow the operator to find a higher concentration using the same procedure.

If there is no tick, press the TICK/CAL button **[B]** again to reset to the steady ticking sound. For best results always use the leak detector prior to using any liquid leak detection fluids as these sensors will detect their presence.

10. Following Country, Province, State, Municipal and/or Company procedures move to the areas where gas readings are suspected or must be tested. During sampling the respective readings may change. Audible and visual alarms will activate when the preset limits are reached.
11. When being used in dark areas press and release the LIGHT/ZERO button  to turn on the back light Press again to turn off.
12. To turn instrument off, push and hold the POWER/MUTE button  for 5-6 seconds until "OFF" appears on the display.

CALIBRATION CHECK

To verify the accuracy of any **SENSIT® HXG-2d** it must be exposed to a known concentration of test gas. Any sensor that does not meet the specifications listed in this manual may require calibration or replacement.

Any time it is suspected the **SENSIT® HXG-2d** is not working properly, has read “OL” or has been exposed to silicone, check calibration.

CALIBRATION

Calibration is the process of setting the readings of the instrument to equal the value of the certified calibration gas. The instrument should operate for 5 minutes before calibrating.

NOTE: Use of calibration kits other than those offered or approved by **SENSIT Technologies** may cause inaccurate readings.

Repairs may be required if the instrument fails to calibrate. Use only sensors supplied by **SENSIT Technologies** or their authorized representative.

NOTE: During the calibration process the numbers on the display are not the actual gas concentration.

STEP 1: Prepare 50%LEL or 10% LEL Methane/Air, or 50%LEL Propane/Air, depending on what calibration point the unit calls for, and proper regulator and adapter. Press and hold the ZERO **[C]** button to reset fresh air zero (indicated by “Zro” on the display)

STEP 2: Press and hold the TICK/CAL button **[B]** for 6 seconds until “CH4” or “PRO” is displayed. (Note: Older units may display “gas” instead of “CH4” or “PRO”)


STEP 3: Attach the adapter to the sensor cap assembly.

STEP 4: Press the TICK/CAL button **[B]** and the cal icon will flash and numbers will change on the display. Upon completion, the working display will appear with the gas reading.

A reading of “bAd” indicates unsuccessful calibration. Repeat process if “bAd” appears. Press the POWER/MUTE button **[A]** to clear the “bAd” display reading and go to the working display.

Continued unsuccessful calibrations may indicate faulty sensor. Any instrument that will not calibrate or continues to indicate “bAd” on the display, should be taken out of service. Please contact **SENSIT Technologies** for further assistance.

SENSOR REPLACEMENT

 **WARNING:** Calibration must be performed if the sensor is replaced.

 **WARNING:** Perform service only in areas known to be non-flammable.

 **WARNING:** Substitution of components may impair intrinsic safety.

 **WARNING:** Use only sensor from **SENSIT Technologies**.

Part Number 375-2611-01


STEP 1: Turn off instrument.

STEP 2: Remove sensor cap and sensor retainer filter.

STEP 3: Remove sensor. Observe the location of the tab relative to the white dot beneath, on the circuit board.

STEP 4: Replace sensor. Be sure to align the sensor tab directly over the white dot.

STEP 5: Place sensor retainer filter inside sensor cap and install sensor cap.

STEP 6: Turn instrument on and wait for zero process to complete. “bAd” indicates improperly installed sensor or additional warm-up time is required. Allow the instrument to operate for 10 minutes, then press and hold the  button to reestablish zero. If “bAd” remains on the display, remove the instrument from service.

STEP 7: If zeroing of the replacement sensor was successful and at least a 5 minute warm-up has been observed, proceed with the calibration instructions.

ADJUSTABLE FEATURES

MENU ITEMS	RANGE	DEFAULT
Alarm PPM	100-990 ppm	OFF
Alarm - LEL	2-60%	10%
Show PPM	10PPM Resolution	ON
Gas Type	Methane or Propane	Methane (CH ₄)

NOTE: Older instruments may not support propane gas type.

Changing the calibration gas for CH₄ (methane) or PRO (propane)

While the unit is on and in the working display, press and release the **[A]** and **[C]** buttons together until the display shows Opt.

Press and release the **[C]** button until CAL CH₄ or CAL PRO is displayed.

Press and release the **[B]** button until desired calibration gas is displayed (CH₄ or PRO).

Press and release the **[A]** button. The unit will exit back to its working display.

Turn the unit off and back on. Verify during the warm-up sequence that the gas type desired is displayed. Calibrate to the gas type displayed.

OPTIONS MENU

The option menu is used to change the unit to show ppm/LEL or LEL only. It is also used to change the alarm point of the unit in ppm or LEL. LEL alarm point is adjustable from 2% to 60%. PPM alarm point is adjustable from 99 to 990 PPM. Use the steps below to make adjustments.

HOW TO CONFIGURE FOR LEL OR PPM AND LEL DISPLAY

(Current alarm point remains)

1. Press and release the **[A]** and **[C]** buttons together and release. "Opt" will be shown
2. Press and release the **[B]** button. "diS" and "%" will be shown on display. Chose from one of the options listed:
 - a. (LEL only display) Press and release the **[B]** button. "AL" and "%" will be shown on display. Press and release the **[A]** button. Unit will return to working display.
 - b. (PPM and LEL display) Press and release the **[C]** button. "diS", "%" and "ppm" will be shown on display. Press and release the **[B]** button. "AL" and "ppm" will be shown on display. Press and release the **[A]** button. Unit will return to working display.

HOW TO CHANGE LEL ALARM POINT WITH PPM READINGS ON DISPLAY

1. Press and release the **[A]** and **C** buttons. "Opt" will be shown.
2. Press and release the **[B]** button. "diS" and "%" will be shown.
3. Press and release the **[C]** button. "diS", "%" and "ppm" will be shown.
4. Press and release the **[B]** button. "AL" and ppm" will be shown.
5. Press and release the **[C]** button. "AL" and "%" will be shown.
6. Press and release the **[B]** button. Current LEL alarm point will be shown. Use the **[B]** button to decrease this number, or use the **[C]** button to increase this number.
7. Press and release the **[A]** button. "CAL" and "CH4" will be shown.
8. Press and release the **[A]** button. Unit will return to working display.

HOW TO CHANGE LEL ALARM POINT WITH LEL READINGS ON DISPLAY



1. Press and release the **[A]** and **[C]** buttons. "Opt" will be shown.
2. Press and release the **[B]** button. "diS" and "%" will be shown.
3. Press and release the **[B]** button. "AL" and "%" will be shown.
4. Press and release the **[B]** button. Current LEL alarm point will be shown. Use the **[B]** button to decrease this number, or use the **[C]** button to increase this number.
5. Press and release the **[A]** button. "CAL CH4" will be shown.
6. Press and release the **[A]** button. Unit will return to working display.

HOW TO CHANGE LEL ALARM POINT WITH LEL READINGS ON DISPLAY

1. Press and release the **[A]** and **[C]** buttons. "Opt" will be shown.
2. Press and release the **[B]** button. "diS" and "%" will be shown.
3. Press and release the **[B]** button. "AL" and "%" will be shown.
4. Press and release the **[B]** button. Current LEL alarm point will be shown. Use the B button to decrease this number, or use the **[C]** button to increase this number.
5. Press and release the **[A]** button. "CAL CH4" will be shown.
6. Press and release the **[A]** button. Unit will return to working display.

HOW TO CHANGE PPM ALARM POINT WITH PPM READINGS ON DISPLAY

1. Press and release the **[A]** and **[C]** buttons and release. "Opt" will be shown.
2. Press and release the **[B]** button. "diS" and "%" will be shown.
3. Press and release the **[C]** button. "diS", "%" and "ppm" will be shown.
4. Press and release the **[B]** button. "AL" and "ppm" will be shown.
5. Press and release the **[B]** button. Current ppm alarm point will be shown. Use the **[B]** button to decrease this number, or use the **[C]** button to increase this number.

6. Press and release the  button. "CAL CH4" will be shown.
7. Press and release the  button. Unit will return to working display.

NOTES

NOTES

NOTES

WARRANTY

Your **SENSIT® HXG-2d** instrument is warranted to be free from defects in materials and workmanship for a period of two years after purchase (excluding sensor, calibration and batteries). If within the warranty period your instrument should become inoperative from such defects, the unit will be repaired or replaced at our option. This warranty covers normal use and does not cover damage which occurs in shipment or failure which results from alteration, tampering, accident, misuse, abuse, neglect, or improper maintenance. A purchase receipt or other proof of date of original purchase will be required before warranty performance will be rendered. Instruments out of warranty will be repaired for a service charge. Return the unit postpaid and insured to:

This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

SENSIT Technologies

851 Transport Drive
Valparaiso, IN 46383

Phone: (219) 465-2700
888 4 SENSIT (473-6748)
Fax: (219) 465-2701

MADE IN THE USA

WITH GLOBALLY SOURCED COMPONENTS

SENSIT® HXG-2d Instruction Manual
Part # 750-00022



Revision 03-25-2019