

SENSIT® LZ30

METHANE GAS DETECTOR

CHARGER BASE KIT OPERATIONAL MANUAL

Read and understand instructions before use.



CONTENTS

FOR YOUR SAFETY	3
SENSIT® LZ30 CHARGER BASE KIT (871-00099)	3
LZ30 CHARGER BASE KIT	4
DESCRIPTION	4
SPECIFICATIONS/RATINGS	4
LABELS AND MARKINGS	4
SETUP	5
INDICATOR LIGHT CONFIGURATION	5
BATTERY CHARGING: INSTALLED IN INSTRUMENT	5
MAINTENANCE AND SERVICE	5
NOTES	6
NOTES	7
WARRANTY	8

FOR YOUR SAFETY

SENSIT® LZ30 CHARGER BASE KIT (871-00099)

⚠ WARNING: Charging Station shall only be used in a non-hazardous area.

⚠ WARNING: Use only SENSIT® LZ30 CHARGER BASE KIT (871-00099) with the SENSIT® LZ30 Instrument (834-00000-01AA).

⚠ WARNING: Do not use with any non-rechargeable batteries.

⚠ WARNING: Charge only in a temperature range of 0° to 40°C (32° to 104°F).

⚠ WARNING: To prevent risk of ignition of a flammable atmosphere, battery pack must only be charged in an area known to be non-hazardous.

⚠ WARNING: Charger must be used and stored in a clean, dry area.

⚠ WARNING: This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensor, or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

⚠ WARNING: Cleaning and user maintenance shall not be made by children without supervision.

⚠ WARNING: Only use the detachable power supply provided by **SENSIT Technologies** (PHIHONG, Model PSAC12R-120).

⚠ WARNING: For indoor use only.

⚠ WARNING: Children should be supervised to ensure that they do not play with the appliance.



KEEP FREE OF DUST



INDOOR USE ONLY



DO NOT EXPOSE TO MOISTURE



DO NOT EXPOSE TO MOISTURE

LZ30 CHARGER BASE KIT

DESCRIPTION

The SENSIT® LZ30 Charging Base is used for recharging the SENSIT® LZ30 (834-00000-01A) which contains a rechargeable Lithium-Ion battery pack.

SPECIFICATIONS/RATINGS

SIZE:	H-2.8 x W-4.4 x D-3.9 in (72.2 x 111.4 x 99.37mm)
ENVIRONMENTAL CONDITIONS:	Altitude (<= 2000 meters) Relative Humidity (<=98% non-condensing) Pollution Degree (pollution degree 1)

PARAMETER	VALUE
Input Voltage	12 VDC
Input Current	1.5 ADC Max
Nominal Output Voltage	4.2 VDC
Maximum Output Voltage	4.2 VDC
Output Current	0.9 ADC Max
Operating Temperature	0-40 °C

LABELS AND MARKINGS



SETUP

Upon receiving the SENSIT® LZ30 CHARGER BASE KIT (871-00099), remove it from the packaging with which the unit was shipped.

1. Inspect the Power Supply and supply cord. If the supply cord is damaged, it must be replaced by a special cord or assembly available from the manufacturer or its service agent.
2. Plug the Power Supply (vehicle or wall) into the appropriate power source.
3. Plug the male connector on the Power Supply into the threaded receptacle on the left side (with serial label facing you) of the Charging Station
4. Tighten the nut on the male connector of the Power Supply until hand tight.

INDICATOR LIGHT CONFIGURATION

YELLOW:	Power connected to Charger Base
RED (SOLID):	Charging
RED (BLINKING):	Error, Charge suspended (Outside allowable temperature)
GREEN (SOLID):	Fully charged

BATTERY CHARGING: INSTALLED IN INSTRUMENT

1. Make sure the YELLOW power light is lit on the front face of the charger base (PN:871-00098). This indicates power is connected to the charger, and it is ready for charging.
2. Insert SENSIT® LZ30 into the Charger Base, bottom face down. Insert SENSIT® LZ30 into the Charger Base, bottom face down.
3. Push down until the shrapnel side clips, snap into place.
4. The RED light should be solid on the front face of the charger. This indicates the instrument is charging.

Once charging is complete, the red light will turn off and the green light will turn on, typically <10 hours.

To remove the Instrument:

1. Hold the charger base down.
2. Pull the instrument up.

MAINTENANCE AND SERVICE

Inspect the device whenever the device is uninstalled, and reinstalled at a new location, or once every 6 months.

If the supply cord is damaged, it must be replaced by a special cord or assembly available from the manufacturer or its service agent.

To clean the unit, wipe with a damp cloth soaked in water.

If the equipment is used in a manner not specified by the manufacturer, the protection provided by the equipment may be impaired.

NOTES

NOTES

WARRANTY

Your SENSIT® LZ30 Charger Base Kit is warranted to be free from defects in materials and workmanship for a period of two years after purchase. The circuit board is warranted for 5 years. If within the warranty period, your instrument should become inoperative from such defects, the unit will be repaired or replaced at our option.

This warranty covers normal use and does not cover damage which occurs in shipment or failure which results from alteration, tampering, accident, misuse, abuse, neglect, or improper maintenance. Proof of purchase may be required before warranty is rendered. Units out of warranty will be repaired for a service charge. Internal repair or maintenance must be completed by a **SENSIT Technologies** authorized technician. Violation will void warranty. Units must be returned postpaid, insured and to the attention of the Service Dept. for warranty or repair.

This warranty gives you specific legal rights and you may have other rights which vary from state to state.

851 Transport Drive
Valparaiso, IN 46383-8432
Phone: 219.465.2700
Toll Free: 888.4.SENSIT (473.6748)
Fax: 219.465.2701
Website: www.gasleaksensors.com

SENSIT

MADE IN THE USA

WITH GLOBALLY SOURCED COMPONENTS

SENSIT® LZ30 CHARGER BASE KIT Operation Manual (English)

Part Number: 750-00095

Revision: 10/28/2022