


CALIBRATION PROCEDURE

for the TRAK-IT® IIIa



View Video

1

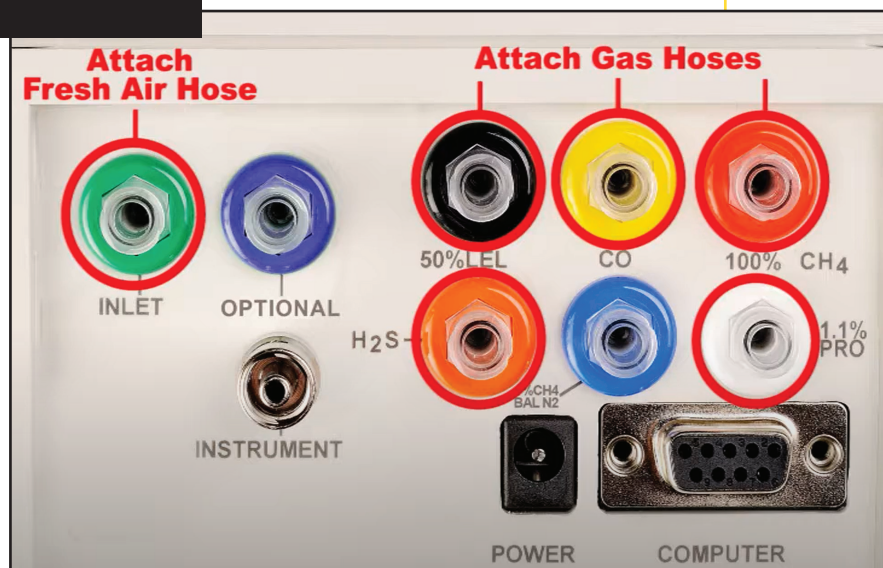

Attach Fresh Air Hose and Gas Hoses to Smart-Cal Station

2



Attach Instrument Hose & Press & Hold **A** to Power on the Trak-It IIIa

3




To Change GAS TYPE, Press & Hold **B**, then Press & Release **C** to scroll to GAS TYPE. To select gas, Press & Release **B** for NAT or **C** for PRO. Press & Release **A** to return to working display.

4



Allow instrument to warm up for 5 minutes. To enter into SMART-CAL, Press & Hold **A** for 2 seconds. On Cal Station, Press & Release Calibration Button.

5

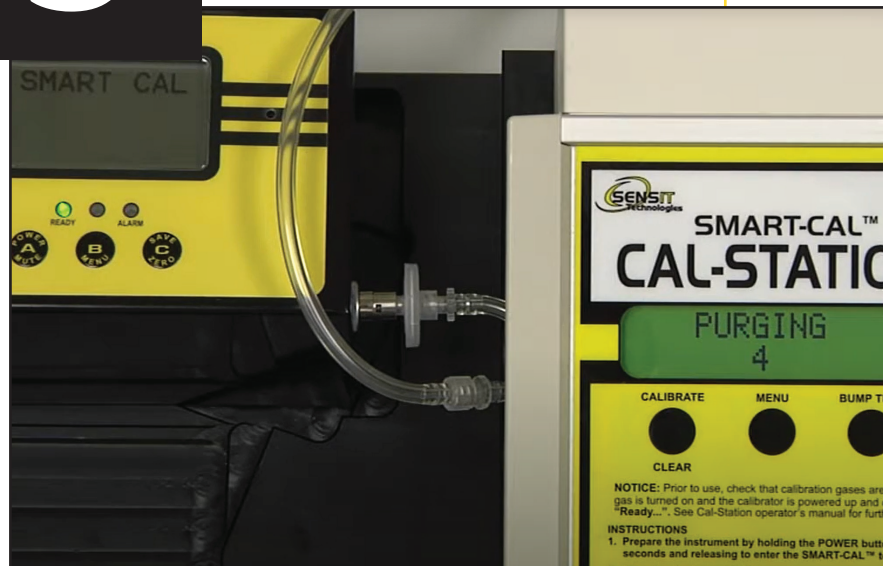

Screen will display PURGE countdown. After PURGE is complete, instrument will AUTOZERO and calibration process will begin.

6



Continue Calibration until SMART CAL displays "CALIBRATION PASSED". If there is a problem or failure, repeat procedure. If the calibration failure persists, contact SENSIT's Repair Department at 219-465-2700


7



Once PASSED, Press & Release the Clear Button on the Cal-Station. Trak-It IIIa will return to working display, Press & Release **A**. Disconnect hose and allow instrument to purge before turning off.



Brochure

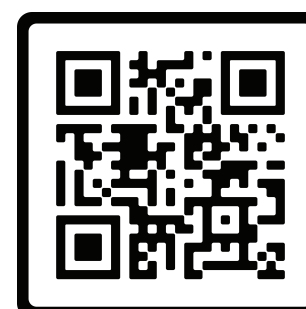

Quick Start



Manual



Accessories

CALIBRATION PROCEDURE

for the TRAK-IT[®] IIIa



View Video

1



Attach Fresh Air Hose and Gas Hoses to Smart-Cal Station




Attach Instrument Hose & Press & Hold **A** to Power on the Trak-It IIIa

3




To Change GAS TYPE, Press & Hold **B**, then Press & Release **C** to scroll to GAS TYPE. To select gas, Press & Release **B** for NAT or **C** for PRO. Press & Release **A** to return to working display.

4

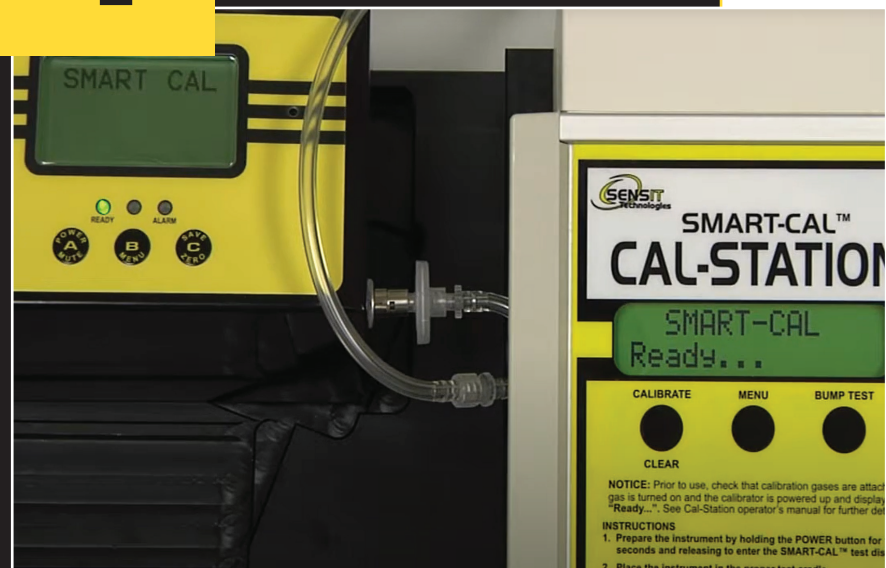

Allow instrument to warm up for 5 minutes. To enter into SMART-CAL, Press & Hold **A** for 2 seconds. On Cal Station, Press & Release Calibration Button.

5

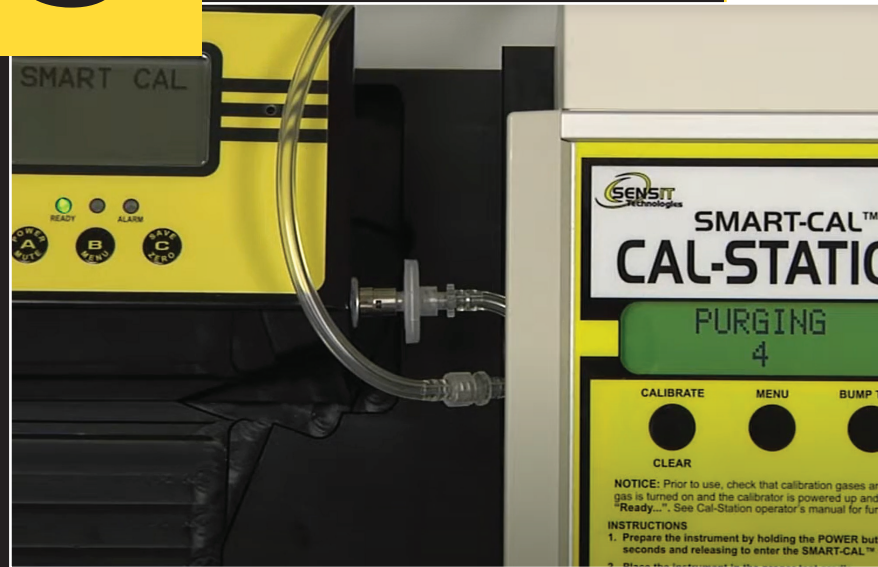


Screen will display PURGE countdown. After PURGE is complete, instrument will AUTOZERO and calibration process will begin.

6



Continue Calibration until SMART CAL displays "CALIBRATION PASSED". If there is a problem or failure, repeat procedure. If the calibration failure persists, contact SENSIT's Repair Department at 219-465-2700

7

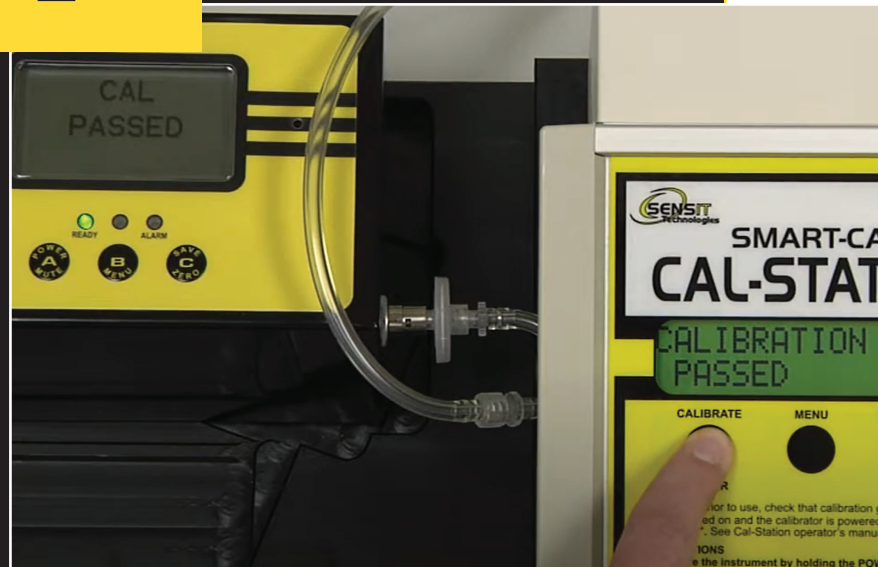

Once PASSED, Press & Release the Clear Button on the Cal-Station. Trak-It IIIa will return to working display, Press & Release **A**. Disconnect hose and allow instrument to purge before turning off.



Brochure



Quick Start



Manual



Accessories