


# CALIBRATION STEPS USING SMART-CAL 360

## for the SENSIT® GOLD 3



### G3 GOOSENECK STORAGE POSITION

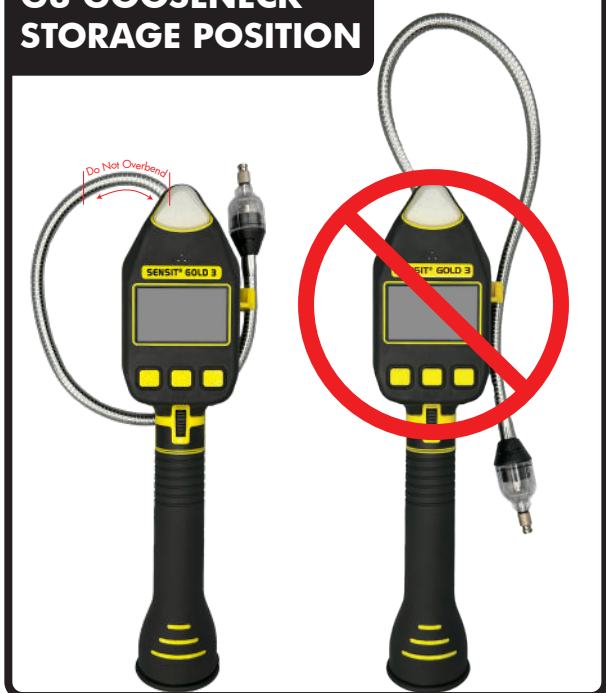

Allow the GOLD 3 to run for 5 minutes before calibrating

Connect instrument hose to GOLD 3

Press **[A]** for 1-2 seconds and release. SMART-CAL should appear on screen. Wait for "Enabled" to display

On the station, press CALIBRATION

If more than one GOLD 3 is in SMART-CAL Mode, a list of serial numbers will appear on the station. The user will select the device to be calibrated

The process will begin automatically including a flow block and autozero

Refer to the instruction manual for manual calibration steps

# SENS



Brochure



Instruction Manual



Safety Manual