




**AIR QUALITY**

# SENSIT Device

**Response Factors**

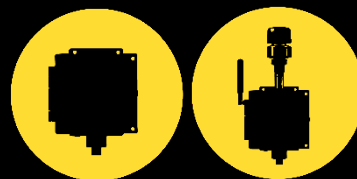

## PID Response

Photoionization Detectors (PIDs) respond to a broad range of organic and a few inorganic gaseous and volatile chemicals ('volatiles'). In order for PID to respond to a volatile, the photon energy of the lamp must be greater than its ionization energy (IE). SENSIT Device PIDs are available with lamps emitting light of maximum energy of 10.0 eV, 10.6 eV, and 11.7 eV. This Technical Article lists the response factors ('RF's') for over 900 volatiles with PID incorporating these lamps. The RF relates the sensitivity of PID to a volatile to the sensitivity to the standard calibration gas isobutylene. The higher the RF, the lower the sensitivity.

## Isobutylene as Reference Gas

Ideally, the PID response to a chemical volatile would be calibrated by using a low concentration of the chemical in air. However, this is often not practical. Isobutylene is then used to calibrate PID, and a Response Factor (RF) used to convert the isobutylene calibrated measurement to a measurement of the

target volatile:

Concentration of target chemical = isobutylene calibrated measurement x RF

For example, the RF of anisole is 0.59 with a 10.6 eV lamp. Therefore, a reading of 10 ppm using an isobutylene-calibrated unit would indicate:

Concentration of anisole = 10 ppm x 0.59 = 5.9 ppm

In SENSIT Device detectors, RFs are pre-programmed into a compound library and can be called up to make the PID read out in units of the chemical of interest. For example, to indicate a measurement of acetone with a detector engaging a 10.6 eV lamp, an instrument is calibrated with isobutylene, and acetone is selected as the target compound, for which the RF is 0.70. The detector then displays directly the concentration of acetone by multiplying the isobutylene equivalent response by the response factor.

## Compound Mixtures

The PID will respond to all detectable volatiles present and it is not possible to measure the concentration of each individual component unless the percentage of each volatile is both fixed and known. This is often fulfilled, for example, in detecting headspace gas from gasoline, diesel, solvents and degreasers. When the formulation of a given mixture is known, the overall response factor for the mixture can be calculated as follows:

$$RF = 1/[X1/RF1 + X2/RF2 + X3/RF3 \dots]$$

where X1, X2, and X3 are the mole fractions of components 1, 2, and 3, etc. For example, if a mixture consisted of 20% anisole (RF= 0.47), 30% acetone (RF = 0.70) and 50% ethanol (RF = 8.7), the overall RF would be:

$$RF = 1/[(0.2/0.47) + (0.3/0.7) + (0.5/8.7)] = 1.10$$

This factor can then be used to reconstruct the concentration of each component. For example, to measure worker exposure near a vat generating the above volatile mixture, the PID is calibrated with isobutylene and the response factor is set to 1.10. If the overall reading is 100 ppm, then the concentration of anisole is 20 ppm, acetone is 30 ppm, and ethanol is 50 ppm.

## Concentration measurements of ppm vs mg/m3

All the RFs in this table apply to calibration and readings in units of ppm or ppb, normalized at 25 oC and 1012 mbar pressure. The following equation allows conversion between ppm and mg/m3:

$$\text{Concentration (mg/m}^3\text{)} = \text{Concentration (ppm)} \times \text{molecular weight (g/mole)} / 24.5$$

When an SENSIT Device detector display mode of mg/m<sup>3</sup> is selected, the instrument uses the above conversion internally and the user does not need to make any adjustments. However, the user should make sure to enter or adjust all High, Low, STEL and TWA alarm limits in the appropriate units if these are not provided by the instrument database.

## **Response Factors of Chemicals on SENSIT Device PID Lamps**

Response factors for important chemicals are identified below. Chemicals are listed according to their most common name, but the CAS number should be used to more precisely identify each chemical.

RF's listed as 'ZR' indicate zero response. 'NA' that the value is not available, because the PID response is insignificant at toxic concentrations of the volatile, or its RF is difficult to predict or measure.

The RFs of many chemicals have been measured at SENSIT Device typically with 10 and 50 ppm of the target volatile, using ten PIDs containing lamps of different photon energy and intensity and of different sensor designs. Generally 50 ppm responses have been used. These RFs are indicated in bold in the table below. The accuracy of measured RFs is indicated by the number as follows:

Three significant figures,  $\pm 5\%$

Two significant figures,  $\pm 10\%$

One significant figure:  $\pm 20\%$

Estimated RFs are based on careful review of previously documented technical data, and RF measurements of homologous series of chemicals. Clearly the accuracy of these values cannot be asserted, and they are typically given to one significant figure. An estimated RF of 1 should generally be regarded as a rough estimate, and may be incorrect by a factor of two.

All RFs are subject to some variation in PID electrode stack design, UV light intensity. However, particular care should be taken in measuring the PID response of gases at concentrations exceeding a few 1000 ppm as non-linearity of PID response varies between chemicals. In short, it is strongly recommended for PID devices to be calibrated for any specific volatile of interest, at the concentration of interest.

Caution should also be taken in making measurements at low concentrations of gas following exposure to concentrations which are 100's of times higher, due to the time required for sensor clear down. Calibration of the detector at divergent concentrations of interest is strongly recommended.

Finally, certain groups of volatiles have been identified, or are suspected, of causing temporary, or in the case of siloxanes, more extended, contamination of the PID window. Given the diversity of volatiles detected by PID, the end user should frequently calibrate, or bump test the PID application in its initial application to the sensing of less common volatiles.

The **Notes** column in the table below identifies the following:

**S:** slow. PID requires at least 30 s for stable response.

**V:** Variable response. The response is susceptible to small changes in ambient conditions, particularly humidity.

**X:** Temporarily contaminating. PID responsivity may be suppressed for at least 30 min after 100 ppm-min exposure.

**W!**: Expected to cause PID lamp window fouling. May require regular bump tests and window cleaning.

Chemical Name	Alternative Name	Formula	CAS no.	IE, eV	Lamp Type (RF)			Notes
					11.7 eV	10.6eV	10eV	
Acetaldehyde		C2H4O	75-07-0	10.23	2	6	ZR	
Acetamide		C2H5NO	60-35-5	9.69	NA	2	NA	
Acetic acid		C2H4O2	64-19-7	10.66	4	28	ZR	
Acetic anhydride		C4H6O3	108-24-7	10.14	2	4	NA	
Acetoin	3-hydroxybutanone	C4H8O2	513-86-0	~9.8	NA	1	NA	
Acetone	2-propanone	C3H6O	67-64-1	9.69	1.7	1.17	1.20	
Acetone cyanohydrin		C4H7NO	75-86-5	11.09	1	ZR	ZR	
Acetonitrile		CH3CN	75-05-8	12.20	ZR	ZR	ZR	
Acetophenone	methyl phenyl ketone	C8H8O	98-86-2	9.29	NA	0.6	NA	
Acetyl bromide		C2H3BrO	506-96-7	10.24	1.5	8.0	ZR	
Acetylene		C2H2	74-86-2	11.40	2	ZR	ZR	
Acetylglycine, N-		C4H7NO3	543-24-8	9.40	NA	2	NA	
Acrolein		C3H4O	107-02-8	10.22	1.2	3.2	NA	
Acrylic acid		C3H4O2	79-10-7	10.60	3	21	ZR	
Acrylonitrile		C3H3N	107-13-1	10.91	1.6	ZR	ZR	
Alkanes, n-, C6+		CnH2n+2	N/A	~10	NA	1.2	NA	
Allyl alcohol		C3H6O	107-18-6	9.63	1.1	2.3	4	
Allyl bromide	3-bromopropene	C3H5Br	106-95-6	9.96	NA	3	NA	
Allyl chloride	3-chloropropene	C3H5Cl	107-05-1	10.05	0.7	4.5	NA	
Allyl glycidyl ether		C6H10O2	106-92-3	~10	NA	0.8	NA	
Allyl propyl disulfide		C6H12S2	2179-59-1	~8.5	NA	0.4	NA	
Allylamine		C3H7N	107-11-9	8.80		0.8		S V X
Ammonia		NH3	7664-41-7	10.18	5.7	8.5	NA	
Amyl acetate		C7H14O2	628-63-7	9.90	0.64	1.8	9	
Amyl alcohol		C5H12O	71-41-0	10.00	0.75	2.6	10	
Amyl alcohol, tert-		C5H12O	75-85-4	9.80	1.01	1.5	2.8	
Amyl salicylate		C12H16O3	2050-88-0	~9	NA	4	NA	
Anethole		C10H12O	104-46-1	~9	NA	0.4	NA	
Aniline		C6H7N	62-53-3	7.70	NA	0.5	0.8	
Anisole		C7H8O	100-66-3	8.21	0.57	0.59	0.59	
Anisyl aldehyde		C8H8O2	123-11-5	~9	NA	0.4	NA	
Argon		Ar	7440-37-1	15.76	ZR	ZR	NA	
Asphalt, petroleum fumes			8052-42-4	~9	NA	1	NA	
Benzaldehyde		C7H6O	100-52-7	9.49	0.9	0.7	0.9	
Benzene		C6H6	71-43-2	9.24	0.53	0.50	0.54	
Benzenethiol	thiophenol	C7H7S	100-53-8	8.50	0.6	0.8	0.8	
Benzoic acid		C7H6O2	65-85-0	9.30	NA	0.7	NA	
Benzonitrile	cyanobenzene	C7H5N	100-47-0	9.62	2	0.7	0.8	

Chemical Name	Alternative Name	Formula	CAS no.	IE, eV	Lamp Type (RF)			Notes
					11.7 eV	10.6eV	10eV	
Benzoquinone, o-		C6H4O2	583-63-1	9.30	NA	1	NA	
Benzoquinone, p-		C6H4O2	106-51-4	10.01	NA	1	NA	
Benzoyl bromide		C7H5BrO	618-32-6	9.65	NA	2	NA	
Benzyl 2-phenylacetate		C15H14O2	102-16-9	~9	NA	0.5	NA	
Benzyl acetate		C9H10O2	140-11-4	~9	NA	0.6	NA	
Benzyl alcohol		C7H8O	100-51-6	8.26	1.3	1.0	1.6	
Benzyl chloride		C7H7Cl	100-44-7	9.14	0.58	0.7	0.7	
Benzyl formate		C8H8O2	104-57-4	9.32	0.66	0.8	NA	
Benzyl isobutyrate		C11H14O2	103-28-6	~9	NA	0.5	NA	
Benzyl nitrile		C8H7N	140-29-4	9.39	NA	1	NA	
Benzyl propionate		C10H12O2	122-63-4	~9	NA	0.8	NA	
Benzylamine		C7H9N	100-46-9	7.56	NA	0.6	NA	S V X
Biphenyl	diphenyl	C12H10	92-52-4	8.23	NA	0.4	0.6	
Borneol		C10H18O	507-70-0	~9	NA	0.8	NA	
Boron trifluoride		BF3	7637-07-02	15.50	ZR	ZR	ZR	
Bromine		Br2	7726-95-6	10.55	0.74	15	ZR	
Bromine pentafluoride		BrF5	7789-30-2	13.17	ZR	ZR	ZR	
Bromo-2,2-dimethylpropane, 1-	neopentyl bromide	C5H11Br	630-17-1	10.04	NA	2	NA	
Bromo-2-chloroethane, 1-		C2H4BrCl	107-04-0	10.57	0.44	3	ZR	
Bromo-2-methylpentane, 1-		C6H13Br	25346-33-2	10.09	NA	2	NA	
Bromoacetone		C3H5BrO	598-31-2	9.73	NA	1.0	NA	
Bromoacetylene		C2HBr	593-61-3	10.31	NA	4	ZR	
Bromobenzene		C6H5Br	108-86-1	8.98	0.34	0.32	0.32	
Bromobutane, 1-		C4H9Br	109-65-9	10.13	0.6	1.6	14	
Bromobutane, 2-		C4H9Br	78-76-2	10.01	0.62	0.97	1.6	
Bromochloromethane		CH2ClBr	74-97-5	10.77	NA	ZR	ZR	
Bromocyclohexane		C6H11Br	108-85-0	9.87	NA	2	NA	
Bromoethane		C2H5Br	74-96-4	10.29	0.79	1.6	ZR	
Bromoethanol, 2-		C2H5BrO	540-51-2	10.00	NA	2	NA	
Bromoethyl methyl ether, 2-		C3H7OBr	6482-24-2	10.00	2	2.5	NA	
Bromofluoromethane		CH2FBr	373-52-4	~11	NA	ZR	ZR	
Bromoform	tribromomethane	CHBr3	75-25-2	10.48	0.5	2.8	ZR	
Bromopentane, 1-	n-pentyl bromide	C5H11Br	110-53-2	10.10	0.47	1.1	3.5	
Bromopropane, 1-	n-propyl bromide	C3H7Br	106-94-5	10.18	0.7	1.5	70	
Bromopyridine, 3-		C5H4BrN	626-55-1	9.75	NA	2	NA	
Bromopyridine, 4-		C5H4BrN	1120-87-2	9.94	NA	2	NA	
Bromotrifluoromethane		CF3Br	75-63-8	11.78	NA	ZR	ZR	
Bromotrimethylsilane		C3H9BrSi	2857-97-8	10.00	1.6	1.9	2.1	
But-2-ynal		C4H4O	1119-19-3	10.20	NA	3	NA	
But-3-ynal		C4H4O	52844-23-2	9.85	NA	1.5	NA	
Butadiene diepoxide, 1,3-		C4H6O2	1464-53-5	10.00	1.2	4	NA	
Butadiene, 1,3-		C4H6	106-99-0	9.07	1.1	0.8	0.8	
Butane, n-		C4H10	106-97-8	10.63	1.5	40	ZR	
Butanediol, 2,3-		C4H10O2	513-85-9	10.26	5.3	5	15	
Butanedione, 2,3-	biacetyl, diacetyl	C4H6O2	431-03-8	9.56	1.00	0.86	0.87	
Butanoic acid		C4H8O2	107-92-6	10.17	NA	5	NA	
Butanol, 1-		C4H10O	71-36-3	10.04	1	3.9	25	

Chemical Name	Alternative Name	Formula	CAS no.	IE, eV	Lamp Type (RF)			Notes
					11.7 eV	10.6eV	10eV	
Butanol, 2-		C4H10O	78-92-2	10.10	1.2	3.0	8	
Buten-3-ol, 1-		C4H8O	598-32-3	9.50	1.3	1.8	3	
Butene nitrile, 3-		C4H5N	109-75-1	10.20	NA	3.0	NA	
Butene, 1-		C4H8	106-98-9	9.58	NA	1.5	NA	
Butene, 2-		C4H8	107-01-7	9.10	NA	1.3	NA	
Butene, cis-2-		C4H8	590-18-1	9.13	NA	1.3	NA	
Butene, trans-2-		C4H8	624-64-6	9.13	NA	1.3	NA	
Butenoic acid, 3-		C4H6O2	107-93-7	9.75	NA	2	NA	
Butoxyethanol, 2-	Butyl Cellosolve®	C6H14O2	111-76-2	8.68	0.62	1.1	NA	
Butoxyethoxyethanol	ethylene glycol monobutyl ether acetate	C8H18O3	112-34-5	~10	4.8	3	13	
Butoxyethylacetate, 2-		C8H16O3	112-07-2	~9.8	1.3	2	4	
Butyl acetate		C6H12O2	123-86-4	9.91	0.8	2.5	12	
Butyl acetate, sec-		C6H12O2	105-46-4	9.91	0.80	1.8	5.5	
Butyl acrylate		C7H12O2	141-32-2	~9.6	0.6	1.5	NA	
Butyl butyrate		C8H16O2	109-21-7	~9.7	NA	1.8	NA	
Butyl chloroformate		C5H9ClO2	592-34-7	~10.4	NA	3.2	ZR	
Butyl cyclohexan-1-ol, 4- tert-	4-t-butylcyclohexanol	C10H20O	98-52-2	~8.8	NA	1.4	NA	
Butyl cyclohexyl acetate, 2- tert-	2-t-butylcyclohexylacetate	C12H22O2	88-41-5	~10	NA	0.9	NA	
Butyl diglycol acetate		C10H20O4	124-17-4	~10		3.0		
Butyl ether, n-	dibutyl ether	C8H18O	142-96-1	9.28	0.42	0.82	1.10	
Butyl glycidyl ether		C7H14O2	2426-08-06	~10	NA	2	NA	
Butyl iodide	iodobutane	C4H9I	542-69-8	9.23	NA	1	NA	
Butyl isocyanate		C5H9NO	111-36-4	10.14	NA	2.5	NA	
Butyl lactate		C7H14O3	138-22-7	9.80	NA	2.5	NA	
Butyl mercaptan, n-	n-butyl mercaptan	C4H10S	109-79-5	9.15	0.50	0.8	0.8	
Butyl mercaptan, tert-		C4H10S	75-66-1	9.03	0.59	0.62	0.62	
Butyl methacrylate		C8H14O2	97-88-1	~9.5	NA	1	NA	
Butyl propionate, n-		C7H14O2	590-01-2	~9.7	0.80	1.9	4	
Butylamine, n-		C4H11N	109-73-9	8.71	2	1	10	S X
Butylamine, sec-		C4H11N	513-49-5	8.70	NA	0.9	NA	S X
Butylamine, tert-		C4H11N	75-64-9	8.64	1.1	1.2	1.5	S X
Butylbenzene		C10H14	104-51-8	8.69	NA	0.5	0.45	
Butylbenzene, sec-		C10H14	135-98-8	8.68	NA	0.4	0.4	
Butylbenzene, tert-		C10H14	98-06-6	8.69	NA	0.4	0.4	
Butylene carbonate, 1,2-	4-ethyl-1,3-dioxolan-2-one	C5H8O3	4437-85-8	~10.4	3.8	18	ZR	
Butylphenol, o-sec-		C10H14O	89-72-5	7.80	NA	0.9	NA	
Butyn-1-ol, 2-		C4H6O	764-01-2	9.78	NA	1.5	NA	
Butyn-2-one		C4H4O	1423-60-5	10.17	NA	3	NA	
Butyraldehyde		C4H8O	123-72-8	9.86	1.2	1.7	1.9	
Butyrolactone, gamma-		C4H6O2	96-48-0	10.26	NA	15	NA	
Butyronitrile		C4H7N	109-74-0	11.67	2	NR	ZR	
Butyryl chloride		C4H7ClO	141-75-3	~10.4	NA	3	ZR	
Camphene		C10H16	565-00-4	8.86	NA	0.5	0.4	
Camphor		C10H16O	76-22-2	8.76	NA	0.4	NA	
Carbon dioxide		CO2	124-38-9	13.77	ZR	ZR	ZR	
Carbon disulfide		CS2	75-15-0	10.08	0.3	1.4	1.3	
Carbon monoxide		CO	630-08-0	14.01	ZR	ZR	ZR	

Chemical Name	Alternative Name	Formula	CAS no.	IE, eV	Lamp Type (RF)			Notes
					11.7 eV	10.6eV	10eV	
Carbon suboxide		C3O2	504-64-3	10.60	NA	10	ZR	
Carbon tetrabromide		CBr4	558-13-4	10.31	NA	3	ZR	
Carbon tetrachloride		CCl4	56-23-5	11.47	1.7	ZR	ZR	
Carbonyl fluoride		COF2	353-50-4	13.02	NR	NR	ZR	
Carbonyl sulfide		COS	463-58-1	11.18	0.4	ZR	ZR	
Carene		C10H16	13466-78-9	8.40	NA	0.5	NA	
Carvacrol		C10H14O	499-75-2	~9	NA	0.8	NA	
Carvone, R-		C10H14O	6485-40-1	9.77	1.7	1.6	1.5	
Caryophyllene		C15H24	13877-93-5	~9	NA	0.4	NA	
Chloramine	monochloramine	ClH2N	10599-90-3	9.85	NA	2	NA	
Chlorine		Cl2	7782-50-5	11.48	1	ZR	ZR	
Chlorine dioxide		ClO2	10049-04-4	10.36	ZR	ZR	ZR	
Chlorine trifluoride		ClF3	7790-91-2	12.65	NA	ZR	ZR	
Chloro-1,1,1,2-tetrafluoroethane, 2-	R-124	C2HClF4	2837-89-0	~12	ZR	ZR	ZR	
Chloro-1,1,1-trifluoroethane, 2-	R-133a	C2H2ClF3	75-88-7	~12	ZR	ZR	ZR	
Chloro-1,1,2,2-tetrafluoroethane, 1-	R-124a	C2HClF4	354-25-6	~12	ZR	ZR	ZR	
Chloro-1,1,2-trifluoroethane, 1-	R-133	C2H2ClF3	421-04-5	~12	ZR	ZR	ZR	
Chloro-1,1-difluoroethane, 1-	R-142b	C2H3ClF2	75-68-3	11.98	ZR	ZR	ZR	
Chloro-1,1-difluoroethane, 2-	R-142	C2H3ClF2	338-65-8	~11.9	ZR	ZR	ZR	
Chloro-1,1-difluoroethene, 2-	R-1122	C2HClF2	359-10-4	9.80	NA	1.5	NA	
Chloro-1,2,2-trifluoroethane, 1-		C2H2ClF3	431-07-2	~12	ZR	ZR	ZR	
Chloro-1-fluoroethane, 1-	R-151a	C2H4ClF	1615-75-4	~11.7	1	ZR	ZR	
Chloro-2-fluoroethane, 1-	R-151	C2H4ClF	762-50-5	~11.7	1	ZR	ZR	
Chloro-2-propanone, 1-		C3H5ClO	78-95-5	9.92	NA	1	NA	
Chloroacetaldehyde	2-chloroethanal	C2H3OCl	107-20-0	10.16	NA	3	NA	
Chloroacetyl chloride		C2H2Cl2O	79-04-9	10.30		8.0		V
Chlorobenzene		C6H5Cl	108-90-7	9.07	0.47	0.45	0.5	
Chlorobutane, 1-	butyl chloride	C4H9Cl	109-69-3	10.64	0.74	10	ZR	
Chlorobutane, 2-		C4H9Cl	78-86-4	10.57	1	5.8	ZR	
Chlorocyclohexane		C6H11Cl	542-18-7	10.10	0.5	2	20	
Chlorodifluoromethane		CHClF2	75-45-6	12.45	ZR	ZR	ZR	
Chloroethane		C2H5Cl	75-00-3	10.97	1.1	ZR	ZR	
Chloroethanol, 2-	ethyl chlorohydrin	C2H5ClO	107-07-3	10.50	1	10	ZR	
Chloroethyl methyl ether, 2-		C3H7ClO	627-42-9	10.25	NA	2.6	NA	
Chlorofluoromethane		CH2ClF	593-70-4	11.71	NA	ZR	ZR	
Chloroform		CHCl3	67-66-3	11.42	3.5	ZR	ZR	
Chloromethane		CH3Cl	74-87-3	11.28	0.74	ZR	ZR	
Chloromethoxyethane	chloromethyl ethyl ether	C3H7ClO	3188-13-4	10.30	NA	4	ZR	
Chloropentafluoroethane		C2ClF5	76-15-3	12.96	ZR	ZR	ZR	
Chloroprene	2-chlorobuta-1,3-diene	C4H5Cl	126-99-8	8.79	NA	1.3	NA	
Chloropyridine, 2-		C5H4ClN	109-09-1	9.00	NA	1	NA	
Chlorostyrene, o-		C8H7Cl	2039-87-4	~8.5	NA	0.4	NA	
Chlorothiophene, 3-		C4H3ClS	17249-80-8	8.92	0.7	0.7	0.7	
Chlorotoluene, m-		C7H7Cl	108-41-8	8.70	NA	0.5	NA	
Chlorotoluene, o-		C7H7Cl	95-49-8	8.83	0.6	0.5	NA	
Chlorotoluene, p-		C7H7Cl	106-43-4	8.69	0.3	0.4	0.3	
Chlorotrifluoroethylene	R-1113	C2ClF3	79-38-9	9.81	1	1	NA	

Chemical Name	Alternative Name	Formula	CAS no.	IE, eV	Lamp Type (RF)			Notes
					11.7 eV	10.6eV	10eV	
Chlorotrifluoromethane		CClF3	75-72-9	12.60	NA	ZR	ZR	
Cinnamic aldehyde		C8H8O	104-55-2	~9	NA	0.4	NA	
Cinnamyl acetate		C11H12O2	21040-45-9	~9	NA	0.4	NA	
Cinnamyl alcohol		C9H10O	104-54-1	8.10	NA	0.4	NA	
Citral		C10H16O	5392-40-5	~8.7	1.7	1.7	3.4	
Citronellal		C10H18O	106-23-0	~9	NA	0.9	NA	
Citronellol		C10H20O	26489-01-0	~8.5	NA	1.0	NA	
Citronellol acetate		C12H22O2	150-84-5	~9	NA	1.5	NA	
Citronellol formate		C11H20O2	105-85-1	~9	NA	1.5	NA	
Citronellyl isobutyrate		C14H26O2	97-89-2	~9	NA	0.9	NA	
Clary propyl acetate		C11H20O3	131766-73-9	~9	1.3	1.2	NA	
Coumarin		C9H6O2	91-64-5	~9	NA	0.4	NA	
Creosote		n/a	8021-39-4	~9	NA	1	NA	
Cresol, m-	3-methylphenol	C7H8O	108-39-4	8.36	0.8	2.2	1.5	
Cresol, o-	2-methylphenol	C7H8O	95-48-7	8.14	NA	1.1	1.5	
Cresol, p-	4-methylphenol	C7H8O	106-44-5	8.31	NA	1.1	1.5	
Cresyl acetate, p-		C9H10O2	140-39-6	8.60	NA	1.0	NA	
Cresyl ethyl ether, p-		C9H12O	622-60-6	~9	NA	0.8	NA	
Cresyl methyl ether		C8H10O	104-93-8	~9	NA	0.8	NA	
Crotonaldehyde		C4H6O	4170-30-3	9.73	1.4	1.9	2.5	
Crotonyl alcohol		C4H8O	6117-91-5	9.13	NA	0.8	NA	
Cyanogen bromide		CNBr	506-68-3	11.84	ZR	ZR	ZR	
Cyanogen chloride		CNCl	506-77-4	12.49	ZR	ZR	ZR	
Cycloalkanes		N/A	N/A	~10	NA	1.5	NA	
Cyclobutanone		C4H6O	1191-95-3	9.35	NA	1.2	NA	
Cyclobutene		C4H6	822-35-5	9.43	NA	3	NA	
Cycloheptane		C7H14	291-64-5	9.82	NA	1.1	NA	
Cyclohex-2-enedione, 1,4-		C6H6O2	4505-38-8	9.77	NA	1.0	NA	
Cyclohexane		C6H12	110-82-7	9.98	0.64	1.3	3.3	
Cyclohexanethiol		C6H12S	1569-69-3	~9	NA	0.5	NA	
Cyclohexanol		C6H12O	108-93-0	10.00	0.9	1.6	2.7	
Cyclohexanone		C6H10O	108-94-1	9.16	0.8	1.0	1	
Cyclohexene		C6H10	110-83-8	8.95	0.56	0.9	1.4	
Cyclohexyl acetate		C8H14O2	622-45-7	~9.5	NA	1.2	NA	
Cyclohexylamine		C6H13N	108-91-8	8.37	6	3	20	S X
Cyclooctadiene		C8H12	29965-97-7	~9.5	0.5	1.0	1.1	
Cyclopentadiene		C5H6	542-92-7	8.56	NA	0.8	NA	
Cyclopentane		C5H10	287-92-3	10.52	0.7	10	NA	X
Cyclopentanone		C5H8O	120-92-3	9.26	0.8	0.9	1.0	
Cyclopentene		C5H8	142-29-0	9.01	NA	1.5	140	
Cyclopentene-1,3-dione, 4-		C5H4O2	930-60-9	9.60	NA	1.0	NA	
Cyclopropylamine		C3H7N	765-30-0	8.80	1.1	1.5	1.7	S V X
Cymene, p-		C10H14	99-87-6	8.29	NA	0.4	NA	
Decahydronaphthalene	4-isopropyltoluene	C10H18	91-17-8	9.14	NA	0.9	NA	
Decanal	decalin	C10H20O	112-31-2	~9	1.6	1.2	NA	
Decane		C10H22	124-18-5	9.65	0.37	1.2	4.2	
Decenal, trans-4-		C10H18O	65405-70-01	~9	1.2	1.4	NA	



Chemical Name	Alternative Name	Formula	CAS no.	IE, eV	Lamp Type (RF)			Notes
					11.7 eV	10.6eV	10eV	
Decene		C10H22	872-05-9	~9.5		0.8		
Decyne, 1-		C10H18	764-93-2	9.91	0.37	0.43	0.83	
Desfluorane	2-(difluoromethoxy)-1,1,1,2- tetrafluoroethane	C3H2F6O	57041-67-5	~11	2	ZR	ZR	
Deuterium oxide		D2O	7789-20-0	13.60	ZR	ZR	ZR	
Diacetone alcohol	4-hydroxy-4-methyl-pentan-2- one	C6H12O2	123-42-2	~9.6	1.2	0.9	0.84	
Diazine, 1,2-	1,2-diazabenzene	C4H4N2	289-80-5	9.65	NA	3	NA	
Diazine, 1,3-	1,3-diazabenzene	C4H4N2	289-95-2	9.33	NA	3	NA	
Diborane		B2H6	19287-45-7	11.38	NA	ZR	ZR	
Dibromoacetylene		C2Br2	624-61-3	9.65	NA	2	NA	
Dibromochloromethane		CHBr2Cl	124-48-1	10.59	0.7	10	ZR	
Dibromocyclohexane, 1,2-		C6H10Br2	5401-62-7	10.02	NA	3	NA	
Dibromocyclopentane		C5H8Br2	33547-17-0	10.06	NA	3	NA	
Dibromodichloromethane		CBr2Cl2	594-18-3	10.40	NA	4	ZR	
Dibromodifluoromethane		CF2Br2	75-61-6	11.07	NA	3	ZR	
Dibromoethane, 1,2-	EDB, ethylene dibromide	C2H4Br2	106-93-4	10.35	0.6	2	ZR	
Dibromoethene, 1,1-	vinylidene bromide	C2H2Br2	593-92-0	9.78	NA	1.5	NA	
Dibromoethene, 1,2-		C2H2Br2	540-49-8	9.63	NA	1.5	NA	
Dibromomethane	methylene dibromide	CH2Br2	74-95-3	10.41	0.70	1.9	ZR	
Dibromotetrafluoroethane, 1,2-		C2F4Br2	124-73-2	11.10	NA	ZR	ZR	
Dichloro-1,1,1-trifluoroethane, 2,2-	R-124	C2HCl2F3	306-83-2	11.50	NA	ZR	ZR	
Dichloro-1,1-difluoroethane, 1,2-	R-132a	C2H2Cl2F2	1649-08-7	~11.5	1	ZR	ZR	
Dichloro-1,2,2-trifluoroethane, 1,2-		C2HCl2F3	354-23-4	~11.5	NA	ZR	ZR	
Dichloro-1,2-difluoroethane, 1,2-	R-132	C2H2Cl2F2	431-06-1	~11.5	1	ZR	ZR	
Dichloro-1,2-difluoroethene, 1,2-	1,2-dichlorodifluoroethene	C2Cl2F2	598-88-9	10.20	NA	2	NA	
Dichloro-1,3-butadiene, 1,4-		C4H6Cl2	1587-29-7	~9	1	0.6		
Dichloro-1-fluoroethane, 1,1-	R-141a	C2H3Cl2F	1717-00-6	~11	1	ZR	ZR	
Dichloro-1-fluoroethane, 1,2-	R-141	C2H3Cl2F	430-57-9	~11	1	ZR	ZR	
Dichloro-1-propene, 2,3-		C3H4Cl2	78-88-6	~10.5	0.7	1.4	ZR	
Dichloro-2,2-difluoroethene, 1,1-	R-1112a	C2Cl2F2	79-35-6	9.69	1	1	NA	
Dichloro-2-butene, 1,4-		C4H7Cl	764-41-0	~9.5	1	2.0		
Dichloro-2-butene, trans-1,4-		C4H7Cl	110-57-6	~9.5	1	2.0		
Dichloroacetylene		C2Cl2	7572-29-4	9.90	NA	5	NA	
Dichlorobenzene, m-		C6H4Cl2	541-73-1	0.00	0.35	0.5	0.5	
Dichlorobenzene, o-		C6H4Cl2	95-50-1	9.06	0.48	0.6	0.6	
Dichlorobenzene, p-		C6H4Cl2	106-46-7	9.06	0.35	0.5	0.5	
Dichlorodifluoromethane		CCl2F2	75-71-8	11.75	ZR	ZR	ZR	
Dichloroethane, 1,1-	1,1-DCA	C2H4Cl2	75-34-3	11.06	2	ZR	ZR	
Dichloroethane, 1,2-	EDC or 1,2-DCA	C2H4Cl2	107-06-2	11.05	0.6	ZR	ZR	
Dichloroethene, 1,1-	1,2-dichloroethene	C2H2Cl2	75-35-4	10.00	1	1.0	NA	
Dichloroethene, 1,2-	1,1-DCE, vinylidene chloride	C2H2Cl2	540-59-0	9.65	0.34	0.4	0.29	
Dichloroethene, cis-1,2-	c-1,2-DCE	C2H2Cl2	156-59-2	9.66	1	0.8	NA	
Dichloroethene, trans-1,2-	t-1,2-DCE	C2H2Cl2	156-60-5	9.65	0.34	0.4	NA	
Dichlorofluoromethane		CHFCl2	75-43-4	12.39	ZR	ZR	ZR	
Dichloromethane	methylene chloride	CH2Cl2	75-09-2	11.32	1.00	70	ZR	
Dichloromethylamine		CH3Cl2N	7651-91-4	9.52	NA	2	NA	S X
Dichloropropane, 1,2-		C3H6Cl2	78-87-5	10.87	0.70	ZR	ZR	
Dichlorotetrafluoroethane, 1,1-		C2Cl2F4	374-07-2	12.20	ZR	ZR	ZR	

Chemical Name	Alternative Name	Formula	CAS no.	IE, eV	Lamp Type (RF)			Notes
					11.7 eV	10.6eV	10eV	
Dichlorotetrafluoroethane, 1,2-		C2Cl2F4	76-14-2	12.20	ZR	ZR	ZR	
Dicyclohexylamine		C12H23N	101-83-7	~8.5	NA	0.9	NA	S X
Dicyclopentadiene		C10H12	77-73-6	7.74	0.5	0.65	0.67	
Diesel fuel			68334-30-5	8.00	0.4	0.8	NA	
Diethoxyethane, 1,1-		C6H14O2	105-57-7	9.78	0.6	1.5	1.0	V
Diethyl carbonate		C5H10O3	105-58-8	~10.3	1.2	7	ZR	
Diethyl ether	ethyl ether	C4H10O	60-29-7	9.53	1.9	1.1	NA	
Diethyl maleate		C8H12O4	141-05-9	~10	NA	2	NA	
Diethyl malonate		C7H12O4	105-53-3	10.20	NA	4	ZR	
Diethyl phosphite		C4H11O3P	762-04-9	10.31	NA	2	ZR	
Diethyl phthalate		C12H14O4	84-66-2	~9	NA	1	NA	
Diethyl sulfate		C4H10SO4	64-67-5	~10.5	NA	3	ZR	
Diethyl sulfide		C4H10S	352-93-2	8.43	1	0.6	0.5	
Diethyl sulfone		C4H10O2S	597-35-3	9.96	NA	2.0	NA	
Diethylacetylene		C6H10	928-49-4	10.03	NA	2	NA	
Diethylamine		C4H11N	109-89-7	8.01	0.6	1.4	0.8	S X
Diethylaminoethanol, 2-		C6H15ON	100-37-8	8.58	NA	2.7	NA	S X
Diethylaminopropylamine, 3-		C7H18N2	104-78-9	~9	3	5	3	S X
Diethylene glycol monoethyl ether		C6H14O3	111-90-0	~9	NA	0.6	NA	
Diethylenetriamine		C4H13N3	111-40-0	~9	NA	1	NA	S X
Diethylhydroxylamine		C4H11NO	3710-84-7	~10	1.2	1.5	1.5	X
Diethylsilane		C4H12Si	542-91-6	9.80	NA	2	NA	
Difluoroethane, 1,1-		C2H4F2	75-37-6	11.87	ZR	ZR	ZR	
Difluoroethane, 1,2-		C2H4F2	624-72-6	11.86	ZR	ZR	ZR	
Difluoromethane		CH2F2	75-10-5	12.71	ZR	ZR	ZR	
Diglycidyl ether	glycidic ether	C6H10O3	2238-07-5	~9.6	NA	3	NA	
Dihydroeugenol		C10H14O2	2785-87-7	~9	NA	0.4	NA	
Dihydrojasnone		C11H18O	1128-08-1	~9	NA	0.6	NA	
Dihydromyrcenol		C10H20O	18479-58-8	~9	NA	0.8	NA	
Dihydroxybenzene, 1,2-	catechol, benzene-1,2-diol	C6H6O2	120-80-9	8.56	NA	1	NA	
Dihydroxybenzene, 1,3-	resorcinol	C6H6O2	108-46-3	8.63	NA	1	NA	
Diiodomethane	methylene iodide	CH2I2	75-11-6	9.46	NA	1.2	NA	
Diisobutyl ketone	isovalerone	C9H18O	108-83-8	9.04	NA	0.8	0.7	
Diisobutylene	2,4,4-trimethylpentene-1 or 2,4,4-trimethylpentene-2	C8H16	107-39-1	8.91	0.50	0.7	0.9	
Diisopropyl ether	isopropyl ether	C6H14O	108-20-3	9.20	0.62	0.70	0.95	
Diisopropylamine		C6H15N	108-18-9	7.73	0.53	0.7	0.6	S X
Diisopropylbenzene		C12H18	25321-09-9	~8.8	NA	0.5	NA	
Diketene		C4H4O2	674-82-8	9.60	1.4	2.2	NA	
Dimethoxybenzene, 1,4-		C8H10O2	150-78-7	~9	NA	1.3	NA	
Dimethoxyethane, 1,2-	ethylene glycol dimethyl ether	C4H10O2	110-71-4	9.20	0.6	0.9	1.2	
Dimethoxymethane	formal	C3H8O2	109-87-5	10.00	1.2	2.8	13	
Dimethyl carbonate		C3H6O3	616-38-6	10.52	1.5	60	ZR	
Dimethyl disulfide	DMDS	C2H6S2	624-92-0	8.46	NA	0.2	NA	
Dimethyl ether	methyl ether	C2H6O	115-10-6	10.03	NA	1.3	NA	
Dimethyl phosphite		C2H7O3P	868-85-9	10.53	NA	8	ZR	
Dimethyl phthalate		C10H10O4	131-11-3	9.64	NA	1	NA	
Dimethyl sulfate		C2H6O4S	77-78-1	~12	2.3	ZR	ZR	

Chemical Name	Alternative Name	Formula	CAS no.	IE, eV	Lamp Type (RF)			Notes
					11.7 eV	10.6eV	10eV	
Dimethyl sulfoxide	DMSO	C2H6OS	67-68-5	9.10	9	20	32	V
Dimethylacetamide N,N-		C4H9NO	127-19-5	8.81	0.8	1.3	NA	
Dimethylacetylene		C4H6	503-17-3	9.58	NA	1	NA	
Dimethylamine		C2H7N	124-40-3	8.24	2	1.5	NA	S X
Dimethylaminoethanol, 2-	dimethylethanolamine	C4H11NO	108-01-0	8.80	NA	1.5	NA	S V X
Dimethylaniline, NN-		C8H11N	121-69-7	7.12	NA	0.6	0.5	
Dimethylboron bromide		C2H6BBBr	5158-50-9	10.25	NA	4	NA	
Dimethylbutyl acetate, 1,3-	sec-hexyl acetate	C8H16O2	108-84-9	~9.5	2	1.6	NA	
Dimethylcycloheptane, 1,2-		C9H18	13151-50-3	10.21	NA	1.3	NA	
Dimethylcyclohexane, 1,2-	1,2-DMCH	C8H16	583-57-3	9.41	0.45	0.55	0.9	
Dimethylcyclopentane		C7H14	1192-18-3	9.92	NA	1.2	NA	
Dimethylethylamine, NN-	DMEA	C4H11N	598-56-1	7.74	1.2	1.6	1.7	S X W!
Dimethylformamide	DMF	C3H7NO	68-12-2	9.13	1.12	1.3	1.1	
Dimethylhydrazine, 1,1-	UDMH	C2H8N2	57-14-7	8.05	0.8	1	NA	
Dimethylmethylphosphonate	DMMP	C3H9O3P	756-79-6	9.94	NA	5	NA	
Dimethyloctan-1-ol, 3,7-		C10H22O	106-21-8	~9	NA	1.2	NA	
Dimethyloctan-3-ol, 3,7-		C10H22O	78-69-3	~9	NA	1.2	NA	
Dimethylpentane, 2,4-		C7H16	108-08-7	~9.8	NA	1	NA	
Dimethylsilane		C2H8Si	1111-74-6	10.30	NA	2	ZR	
Dimethylthiophosphoryl chloride		C2H6ClO2PS	2524-03-0	~9	NA	1	NA	
Di-n-butylamine		C8H19N	111-92-2	7.69	1	6	4	S X
Di-n-propylamine		C6H15N	142-84-7	7.80	0.7	1.5	1.5	S V X
Dioxane, 1,4-	p-dioxane	C4H8O2	123-91-1	9.13	0.85	1.45	1.7	
Dioxolane		C3H6O2	646-06-0	9.13	1.47	2.7	4.5	
Dipentene	limonene	C10H16	138-86-3	~8.6	1	0.9	0.8	
Dipentene, (+)-	limonene	C10H16	5989-27-5	0.00	0.4289	0.8	0.8	
Diphenyl ether	phenyl ether	C12H10O	101-84-8	8.09	1.4	1.5	1.7	
Dipropyl ether	propyl ether	C6H14O	111-43-3	9.30	NA	1.0	NA	
Dipropylene glycol		C6H14O3	110-98-5	~10	NA	4	NA	
Disilane		Si2H6	1590-87-0	9.74	NA	2	NA	
Disulfur decafluoride		S2F10	5714-22-7	12.77	NA	ZR	ZR	
Disulfur dibromide		S2Br2	13172-31-1	9.23	NA	1.5	NA	
Disulfur dichloride		S2Cl2	10025-67-9	9.40	NA	3	NA	
Di-tert-butyl-p-cresol		C15H24O	128-37-0	7.80	NA	0.3	NA	
Divinylbenzene		C10H10	1321-74-0	~8.2	NA	0.7	0.6	X
Divinylbenzene, 1,3-		C10H10	108-57-6	~8.3	NA	0.6	0.6	
Dodecene		C12H24	112-40-3	~8.8	NA	1.0	NA	
Enflurane		C4H2F5ClO	13838-16-9	11.70	ZR	ZR	ZR	
Epichlorohydrin	1-chloro-2,3-epoxypropane	C3H5ClO	106-89-8	10.20	0.80	5	30	
Epoxypropyl isopropyl ether, 2,3-	glycidyl isopropyl ether	C6H12O2	4016-14-2	~10	0.6	1.2	1.1	
Estagole		C10H12O	140-67-0	~9	NA	0.7	NA	
Ethane		C2H6	74-84-0	11.56	3	ZR	ZR	
Ethanol	alcohol, ethyl alcohol	C2H6O	64-17-5	10.43	3	11	ZR	
Ethanolamine		C2H7NO	141-43-5	10.47	3	3	ZR	X
Ethyl tert-butyl ether		C6H14O	637-92-3	9.39	NA	0.8	NA	
Ethyl-2-methyl benzene, 1-	2-ethyltoluene	C9H12	611-14-3	~8.7	NA	0.5	0.5	
Ethyl-3-ethoxypropionate		C7H14O3	763-69-9	~9.5	NA	3	NA	

Chemical Name	Alternative Name	Formula	CAS no.	IE, eV	Lamp Type (RF)			Notes
					11.7 eV	10.6eV	10eV	
Ethylacetylene		C4H6	107-00-6	10.18	NA	3	NA	
Ethylamine		C2H7N	75-04-7	8.86	1	1	NA	S X
Ethylbenzene		C8H10	100-41-4	8.76	0.54	0.56	0.6	
Ethylcyclohexane		C8H16	1678-91-7	9.54	0.48	0.8	1.3	
Ethylene	ethene	C2H4	74-85-1	10.51	3	50	ZR	
Ethylene carbonate		C3H4O3	96-49-1	10.40	NA	ZR	ZR	
Ethylene cyanohydrin		C3H5NO	109-78-4	~10.8	1	ZR	ZR	
Ethylene dinitrate		C2H4O6N2	628-96-6	~10.8	NA	ZR	ZR	
Ethylene glycol		C2H6O2	107-21-1	10.16	4.1	9	9	
Ethylene glycol diacetate		C6H10O4	111-55-7	~10	NA	4	NA	
Ethylene glycol monopropyl ether	2-propoxyethanol	C5H12O2	2807-30-9	~9	1.7	3	4	
Ethylene oxide	oxirane	C2H4O	75-21-8	10.56	2	9.0	ZR	
Ethylenediamine		C2H8N2	107-15-3	8.60	8	10	10	S V X
Ethyleneimine		C2H5N	151-56-4	9.20	NA	2	NA	S X
Ethylhexanal, 2-		C8H16O	123-05-7	~9	NA	1.5	NA	
Ethylhexanoic acid, 2-		C8H16O2	149-57-5	~10	2.9	5	16	
Ethylhexenal, 2-		C8H14O	645-62-5	~9	NA	1.3	NA	
Ethylmorpholine, 4-		C6H13NO	100-74-3	~8	0.9	3	2	S X
Eucalyptol		C10H18O	470-82-6	~9	NA	0.6	NA	
Eugenol		C10H12O2	97-53-0	~9	NA	0.4	NA	
Eugenol methyl ether		C11H14O2	93-15-2	~9	NA	0.4	NA	
Fenchol		C10H18O	1632-73-1	~9	NA	0.4	NA	
Ferrocene		C10H10Fe	102-54-5	6.88	NA	0.8	NA	
Fluorine		F2	7782-41-4	15.70	NA	ZR	ZR	
Fluoro-2-propanone, 1-		C3H5FO	430-51-3	9.92	1	ZR	NA	
Fluorobenzene		C6H5F	462-06-6	9.20	0.78	0.74	0.83	
Fluorobenzoic acid, 4-		C7H5FO2	456-22-4	9.91	NA	2	NA	
Fluoroethane		C2H5F	353-33-6	11.78	NA	ZR	ZR	
Fluoromethane		CH3F	593-53-3	12.47	NA	ZR	ZR	
Formaldehyde		CH2O	50-00-0	10.87	0.6	ZR	ZR	
Formamide		CH3ON	75-12-7	10.20	NA	2	NA	
Formic acid		CH2O2	64-18-6	11.05	5	ZR	ZR	
Furan		C4H4O	110-00-9	8.88	NA	0.4	NA	
Furfural		C5H4O2	98-01-1	9.21	0.5	0.8	NA	
Furfuryl alcohol		C5H6O2	98-00-0	~9.9	NA	2	NA	
Furfuryl mercaptan		C5H6OS	98-02-2	~9	0.60	0.8	0.8	
Gasoline			8006-61-9	~9.9	NA	0.9	1	
Geranial		C10H16O	141-27-5	~9	NA	0.6	NA	
Geraniol		C10H18O	106-24-1	~9	NA	0.7	NA	
Geranyl acetate		C12H20O2	105-87-3	~9	NA	1.2	NA	
Germane		GeH4	7782-65-2	11.34	NA	10	ZR	
Glutaraldehyde	1,5-pentanedial	C5H8O2	111-30-8	~9.6	0.6	0.9	NA	
Glycidol	2,3-epoxypropanol	C3H6O2	556-52-5	~10.8	2	ZR	ZR	
Glycidyl methacrylate		C7H10O3	106-91-2	~10	NA	1.2	ZR	
Glycolaldehyde		C2H4O2	141-46-8	~10.4	NA	5	ZR	
Glyoxal		C2H2O2	107-22-2	10.20	NA	1	NA	
Guaiacol	2-methoxyphenol	C7H8O2	90-05-1	~9	NA	0.8	NA	

Chemical Name	Alternative Name	Formula	CAS no.	IE, eV	Lamp Type (RF)			Notes
					11.7 eV	10.6eV	10eV	
Halothane	fluothane, 2-bromo-2-chloro- 1,1,1-trifluoroethane	CF3CHBrCl	151-67-7	11.00	0.6	ZR	ZR	
Helium		He	7440-59-7	24.59	NA	ZR	ZR	
Heptan-2-one		C7H14O	110-43-0	9.33	0.54	0.85	0.97	
Heptan-3-one		C7H14O	106-35-4	9.02	0.59	0.73	0.81	
Heptan-4-one		C7H14O	123-19-3	9.10	0.7	0.9	1.0	
Heptane		C7H16	142-82-5	9.92	0.5	2.2	11	
Heptanol		C7H16O	53535-33-4	~9.8	NA	1.7	NA	
Heptene, 1-		C7H14	592-76-7	9.34	0.51	0.88	1.1	
Heptylcyclopentan-1-one, 2-		C12H22O	137-03-1	~9	NA	0.8	NA	
Heptyne, 1-		C7H12	628-71-7	10.04	NA	2	NA	
Hex-1-en-3-ol		C6H12O	4798-44-1	~9	NA	0.9	NA	
Hexachlorodisilane		Cl6Si2	13465-77-5	10.40	NA	8	ZR	
Hexachloroethane	R-110	C2Cl6	67-72-1	11.22	1	ZR	ZR	
Hexafluoroethane	R-116	C2F6	76-16-4	13.60	ZR	ZR	ZR	
Hexafluoropropylene		C3F6	116-15-4	10.60	4	NR	ZR	
Hexamethyldisilazane, 1,1,1,3,3,3-	HMDS, hexamethylsilazane	C6H18NSi2	999-97-3	8.60	0.53	0.45	0.5	
Hexamethyldisiloxane		C6H18OSi2	107-46-0	9.60	NA	0.3	NA	
Hexamethylene diisocyanate		C8H12N2O2	822-06-0	~9	NA	1.5	NA	
Hexamethyleneimine		C6H13N	111-49-9	8.41	NA	1.1	NA	S X
Hexan-2-one		C6H12O	591-78-6	9.34	NA	0.8	0.7	
Hexane		C6H14	110-54-3	10.13	0.6	3	13	
Hexanoic acid		C6H12O2	142-62-1	10.12	NA	4	NA	
Hexanol		C6H14O	111-27-3	9.89	0.66	2.0	7	
Hexene, 1-		C6H12	592-41-6	9.44	0.61	0.98	1.1	
Hexenyl acetate, cis-3-		C8H14O2	3681-71-8	~9	0.55	1.0	1.2	
Hexenyl butyrate, cis-3-		C10H18O2	16491-36-4	~9	NA	1.5	NA	
Hexylaldehyde	hexanal	C6H12O	66-25-1	9.72	0.54	1.2	1.8	
Hydrazine		H4N2	302-01-2	8.93	2.1	3	NA	
Hydrazoic acid		HN3	7782-79-8	10.72	NA	ZR	ZR	
Hydrogen		H2	1333-74-0	15.43	ZR	ZR	ZR	
Hydrogen bromide		HBr	10035-10-6	11.62	NA	ZR	ZR	
Hydrogen chloride		HCl	7647-01-0	12.74	NA	ZR	ZR	
Hydrogen cyanide		HCN	74-90-8	13.60	ZR	ZR	ZR	
Hydrogen fluoride		HF	7664-39-3	15.98	NA	ZR	ZR	
Hydrogen iodide		HI	10034-85-2	10.39	NA	5	ZR	
Hydrogen peroxide		H2O2	7722-84-1	~11.7	ZR	ZR	ZR	
Hydrogen selenide		H2Se	7783-07-5	9.88	NA	2	NA	
Hydrogen sulfide		H2S	7783-06-4	10.46	1.5	4	ZR	
Hydrogen telluride		H2Te	7783-09-7	9.14	NA	2	NA	
Hydroxybutanal, 3-		C4H6O2	107-89-1	~9	NA	2	NA	
Hydroxycitronellal		C10H20O2	107-75-5	~9	NA	1.0	NA	
Hydroxyethyl acrylate		C5H8O3	818-61-1	~10	NA	1.2	NA	
Hydroxylamine		H3NO	7803-49-8	10.00	NA	2	NA	
Hydroxypropyl acrylate, 2-		C6H10O3	999-61-1	~9	NA	1.5	NA	
Indene		C9H8	95-13-6	8.81	NA	0.5	0.4	
Indole		C8H7N	120-72-9	7.76	NA	0.4	NA	
Iodine		I2	7553-56-2	9.31	0.1	0.2	0.1	

Chemical Name	Alternative Name	Formula	CAS no.	IE, eV	Lamp Type (RF)			Notes
					11.7 eV	10.6eV	10eV	
Iodobenzene		C6H5I	591-50-4	8.73	NA	0.2	NA	
Iodoethene	vinyl iodide	C2H3I	593-66-8	9.30	NA	1.2	NA	
Iodoform	triiodomethane	CHI3	75-47-8	9.25	NA	1.5	NA	
Iodomethane	methyl iodide	CH3I	74-88-4	9.54	0.26	0.4	NA	
Isoalkanes, C10-C13		C8H18O	68551-17-7	~9.6	NA	1	NA	
Isoamyl acetate		C7H14O2	123-92-2	~9.7	0.66	1.5	6	
Isoamyl salicylate		C12H16O3	87-20-7	~9	NA	1	NA	
Isoamylene		C5H10	513-35-9	8.69	0.63	0.82	0.86	
Isobornyl acetate		C12H20O2	125-12-2	~9	NA	0.5	NA	
Isobutane		C4H10	75-28-5	10.57	1.2	8	ZR	
Isobutanol		C4H10O	78-83-1	10.12	1.1	3	13	
Isobutyl acetate		C6H12O2	110-19-0	9.90	0.8	2.0	10	
Isobutyl acrylate		C7H12O2	106-63-8	~9.5	0.80	1.2	5	
Isobutylamine		C4H11N	78-81-9	0.00	2	1	3	S V X
Isobutylbenzene		C10H14	538-93-2	8.68	NA	0.4	0.4	
Isobutylene		C4H8	115-11-7	9.24	1	1	1	
Isobutylene epoxide		C4H8O	558-30-5	10.00	NA	3	NA	
Isobutyraldehyde		C4H8O	78-84-2	9.74	NA	1.2	NA	
Isobutyric acid		C4H8O2	79-31-2	10.24	1.8	4.4	15	
Isocyanic acid		HNCO	75-13-8	11.60	NA	NR	ZR	
Isodecanol		C10H22O	25339-17-7	~9.8	1	0.9	NA	
Isodihydrolavandulal		C10H18O	35158-25-9	0.00	0.7	0.7	NA	
Isoeugenol		C10H12O2	97-54-1	~9	NA	0.4	NA	
Isoflurane		C3H2ClF5O	26675-46-7	~11	50	ZR	ZR	
Isoheptane		C7H16	591-76-4	9.84	NA	1.2	NA	
Isojasmone		C11H18O	95-41-0	~9	NA	0.7	NA	
Iso menthone		C10H18O	1196-31-2	9.86	NA	0.6	NA	
Isononanal		C9H18O	5435-64-3	~9.6	0.5	0.9	1.4	
Isononanol		C9H20O	3452-97-9	~9.8	1	1.5	NA	
Isooctane	2,2,4-trimethylpentane	C8H18	540-84-1	9.86	0.51	1.1	3.2	
Isooctanol		C8H18O	26952-21-6	~9.8	1	1.7	NA	
Isopentane		C5H12	78-78-4	10.32	4	4	ZR	
Isopentanol		C5H12O	137-32-6	9.86	0.8	2.0	6	
Isopentene		C5H10	563-46-2	9.12	NA	0.8	NA	
Isophorone		C9H14O	78-59-1	9.07	1.1	0.8	1.0	
Isophorone diisocyanate		C12H18N2O2	4098-71-9	~9	NA	0.6	NA	
Isoprene	2-methyl-1,3-butadiene	C5H8	78-79-5	8.85	0.57	0.9	1	
Isopropanol	IPA, 2-propanol	C3H8O	67-63-0	10.17	2	4.0	25	
Isopropanolamine		C3H9NO	78-96-6	~9.6	NA	1.5	NA	S V X
Isopropoxyethanol, 2-	ethylene glycol isopropyl ether	C5H12O2	109-59-1	~10.3	0.8	1.2	1.5	
Isopropyl acetate		C5H10O2	108-21-4	9.99	1.1	2.4	8	
Isopropyl chloroformate		C4H7O2Cl	108-23-6	~10.2	NA	1.6	NA	
Isopropyl mercaptan		C3H8S	75-33-2	9.15	NA	0.6	NA	
Isopropyl nitrite		C3H7NO2	541-42-4	10.23	NA	4.0	NA	
Isopropylamine		C3H9N	75-31-0	8.72	1	1	1	S V X
Isopropylaminoethanol, 2-		C5H13NO	109-56-8	~9	NA	2	NA	
Isopropylcyclohexane		C9H18	696-29-7	9.33	0.53	0.7	1.1	

Chemical Name	Alternative Name	Formula	CAS no.	IE, eV	Lamp Type (RF)			Notes
					11.7 eV	10.6eV	10eV	
Isopropylglycol acetate		C7H14O2	19234-20-9	~9.5	NA	1.2	NA	
Isothiazole		C3H3NS	288-16-4	9.55	NA	3	NA	
Isovaleraldehyde		C5H10O	590-86-3	9.72	0.8	1.3	1.5	
Isovaleric Acid		C5H10O2	503-74-2	~10.2	1.6	5.5	25	
Isoxazole		C3H3NO	288-14-2	9.96	NA		NA	
Jasmal		C11H22O3	1322-17-4	~9	NA	1.4	NA	
Jasmone, cis-		C11H16O	488-10-8	~9	NA	0.5	NA	
Jet Fuel Jp-4	Jet B, wide cut aviation fuel			~9	0.42	0.8	0.7	
Jet Fuel Jp-5	kerosene aviation fuel			~9	0.46	0.7	0.6	
Jet Fuel Jp-8	kerosene aviation fuel			~9	0.32	0.7	0.6	
Kerosene	C10-C16		8008-20-6	~8	NA	0.8	0.7	
Ketene		C2H2O	463-51-4	9.62	NA	3	NA	
Krypton		Kr	7439-90-9	14.00	ZR	ZR	ZR	
Linalool oxide		C10H18O2	14049-11-7	~9	NA	0.6	NA	
Linalyl acetate		C12H20O2	115-95-7	~9	NA	1.1	NA	
Liquefied petroleum gas	LPG, predominantly propane & butanes		68476-85-7	10.95	NA	ZR	ZR	
Maleic anhydride	furan-2,5-dione	C4H2O3	108-31-6	9.90	NA	2	NA	
Menthol		C10H20O	1490-04-6	~9	NA	0.5	NA	
Menthone		C10H18O	89-80-5	~9	NA	0.4	NA	
Mercaptoacetic acid		C2H4O2S	68-11-1	~9.8	NA	1	NA	
Mercury		Hg	7439-97-6	10.44	NV	NV	ZR	
Metaldehyde		C8H16O4	108-62-3	~9.7	NA	2	NA	
Methacrylamide		C4H7NO	79-39-0	~10	NA	2	ZR	
Methacrylic acid		C4H6O2	79-41-4	10.15	NA	2.3	NA	
Methacrylonitrile		C4H5N	126-98-7	10.34	NA	5	ZR	
Methane	natural gas	CH4	74-82-8	12.51	ZR	ZR	ZR	
Methanol		CH4O	67-56-1	10.85	2.9	ZR	ZR	
Methoxy-1-butanol, 3-		C5H12O2	2517-43-3	~9.56	NA	3	NA	
Methoxy-1-propanol, 2-		C4H10O2	1589-47-5	9.30	NA	2	NA	
Methoxy-2,2-dimethylpropane	methyl neopentyl ether	C6H14O	1118-00-9	9.30	NA	0.9	NA	
Methoxybutyl acetate, 3-		C7H14O3	4435-53-4	~9	NA	2	NA	
Methoxyethane	methyl ethyl ether	C3H8O	540-67-0	9.72	NA	1.0	NA	
Methoxyethanol, 2-	methyl cellosolve®, ethylene glycol monomethyl ether, <small>PGME</small>	C3H8O2	109-86-4	9.60	1.4	2.7	NA	
Methoxyethene	methyl vinyl ether	C3H6O	107-25-5	8.95	NA	1.0	NA	
Methoxyethoxyethanol, 2-	diethylene glycol monomethyl ether	C5H12O3	111-77-3	10.00	0.9	1.4	NA	
Methoxyethyl acetate, 2-		C5H10O3	110-49-6	~9.6	2	5	8	
Methoxyethyl ether, 2-	diglyme, diethylene glycol dimethyl ether	C6H14O3	111-96-6	9.80	NA	1.0	NA	
Methoxymethylethoxy-2-propanol	DPGME	C7H16O3	34590-94-8	XXX	NA	1.3	NA	
Methoxypropan-2-ol, 1-	1M2P, PGME, propylene glycol methyl ether	C4H10O2	107-98-2	~9.6	0.95	1.6	2.7	
Methoxypropane, 2-		C4H10O	598-53-8	9.45	NA	1.2	NA	
Methoxypropyl acetate	PGMEA, propylene glycol methyl ether acetate	C6H12O3	108-65-6	~9	0.74	1.6	2.1	
Methyl acetate		C3H6O2	79-20-9	10.27	1.8	7	ZR	
Methyl acetoacetate		C5H8O3	105-45-3	9.81	NA	3	NA	
Methyl acrylate		C4H6O2	96-33-3	10.25	1.1	3.6	80	
Methyl anthranilate		C8H9NO2	134-20-3	~9	NA	0.4	NA	
Methyl benzoate		C8H8O2	93-58-3	9.32	NA	1.2	NA	
Methyl bromide	bromomethane	CH3Br	74-83-9	10.54	1.3	1.9	ZR	

Chemical Name	Alternative Name	Formula	CAS no.	IE, eV	Lamp Type (RF)			Notes
					11.7 eV	10.6eV	10eV	
Methyl cyanoacrylate		C5H5O2N	137-05-3	10.98	2	ZR	ZR	
Methyl dimethylacrylate		C6H10O2	924-50-5	~9.6	NA	2.5	NA	
Methyl ethyl ketone	MEK, Butan-2-one	C4H8O	78-93-3	9.51	1.2	0.96	2	
Methyl ethyl ketone peroxides	MEKP	C8H18O6	1338-23-4	~9	NA	0.8	NA	
Methyl formate		C2H4O2	107-31-3	10.82	NA	ZR	ZR	
Methyl heptyne carbonate		C9H14O2	111-12-6	~9	NA	1.3	NA	
Methyl ionone		C14H22O	1335-46-2	~9	NA	0.4	NA	
Methyl isobutyl ketone	MIBK, 4-methylpentan-2-one	C6H12O	108-10-1	9.30	0.7	0.9	1.01	
Methyl isocyanate		C2H3NO	624-83-9	10.67	1.5	5	ZR	
Methyl isopropyl ketone	MIPK, 2-methylbutan-3-one	C5H10O	563-80-4	9.31	0.92	0.99	0.96	
Methyl isothiocyanate		C2H3NS	556-61-6	9.25	0.4	0.6	NA	
Methyl mercaptan		CH4S	74-93-1	9.44	1	0.7	0.6	
Methyl methacrylate		C5H8O2	80-62-6	9.70	0.92	1.31	2.1	
Methyl perfluorobutyl ether		C5H3F9O	163702-07-6	~11	30	NR	ZR	
Methyl phenyl acetate		C9H10O2	101-41-7	~9	NA	0.4	NA	
Methyl propargyl ether		C4H6O	627-41-8	9.78	NA	2	NA	
Methyl propionate		C4H8O2	554-12-1	10.15	1.46	3.8	36	
Methyl propynoate		C4H4O2	922-67-8	10.30	0.90	10	ZR	
Methyl salicylate		C8H8O3	119-36-8	7.65	NA	0.8	NA	
Methyl sulfide	DMS, dimethyl sulfide	C2H6S	75-18-3	8.69	0.6	0.8	0.7	
Methyl tert-butyl ether	MTBE	C5H12O	1634-04-4	9.24	0.8	1.0	1.02	
Methyl thiocyanate		C2H3NS	556-64-9	9.96	1.5	2.2	3.2	
Methyl isopropyl ketone	MIPK, 2-methylbutan-3-one	C5H10O	563-80-4	9.31	0.92	0.99	0.96	
Methyl isothiocyanate		C2H3NS	556-61-6	9.25	0.4	0.6	NA	
Methyl mercaptan		CH4S	74-93-1	9.44	1	0.7	0.6	
Methyl methacrylate		C5H8O2	80-62-6	9.70	0.92	1.31	2.1	
Methyl perfluorobutyl ether		C5H3F9O	163702-07-6	~11	30	NR	ZR	
Methyl phenyl acetate		C9H10O2	101-41-7	~9	NA	0.4	NA	
Methyl propargyl ether		C4H6O	627-41-8	9.78	NA	2	NA	
Methyl propionate		C4H8O2	554-12-1	10.15	1.46	3.8	36	
Methyl propynoate		C4H4O2	922-67-8	10.30	0.90	10	ZR	
Methyl salicylate		C8H8O3	119-36-8	7.65	NA	0.8	NA	
Methyl sulfide	DMS, dimethyl sulfide	C2H6S	75-18-3	8.69	0.6	0.8	0.7	
Methyl tert-butyl ether	MTBE	C5H12O	1634-04-4	9.24	0.8	1.0	1.02	
Methyl thiocyanate		C2H3NS	556-64-9	9.96	1.5	2.2	3.2	
Methyl thioglycolate		C3H6O2S	2365-48-2	~10	1	2	4	S
Methyl undecanal, 2-		C12H24O	110-41-8	~9	1.7	1.0	NA	
Methyl vinyl ketone		C4H6O	78-94-4	9.65	NA	0.6	NA	
Methyl-1-butene, 3-		C5H10	563-45-1	9.51	NA	0.8	NA	
Methyl-2-butanol, 3-		C5H12O	598-75-4	9.88	NA	3.3	NA	
Methyl-2-butenal, 3-		C5H8O	107-86-8	~9	1.0	1.00	NA	
Methyl-2-hexenoic acid, trans-3-		C7H12O2	027960-21-0	~10	NA	1.5	NA	
Methyl-2-methylpropanoate		C5H10O2	547-63-7	9.86	NA	2	NA	
Methyl-2-propen-1-ol, 2-		C4H8O	513-42-8	9.24	1.2	1.3	1.6	
Methyl-2-pyrrolidinone, N-	NMP, N-methylpyrrolidone	C5H9NO	872-50-4	9.17	0.9	0.9	NA	
Methyl-5-hepten-2-one, 6-	6-Me-5-hepten-2-one	C8H14O	110-93-0	~9.4	0.89	0.63	0.76	
Methylamine		CH5N	74-89-5	8.97	1	1.5	NA	S X



Chemical Name	Alternative Name	Formula	CAS no.	IE, eV	Lamp Type (RF)			Notes
					11.7 eV	10.6eV	10eV	
Methylbutan-1-ol, 3-		C5H12O	123-51-3	9.80	0.8	2.3	10	
Methylbutanal, 2-		C5H10O	96-17-3	9.59	0.8	1.2	1.3	
Methylbutyric acid, 2-		C5H10O2	116-53-0	~10.2	1.6	6	20	
Methylchloroformate		C2H3O2Cl	79-22-1	11.36	1	ZR	ZR	
Methylcyclohexane		C7H14	108-87-2	9.85	0.53	1.1	1	
Methylcyclohexanol		C7H14O	25639-42-3	9.80	NA	2.4	NA	
Methylcyclohexanol, 4-		C7H14O	589-91-3	9.80	NA	2.4	NA	
Methylcyclohexanone, 2-		C7H12O	583-60-8	9.05	NA	1.0	NA	
Methylcyclopentane		C6H12	96-37-7	9.85	NA	1.5	NA	
Methylenepentane, 3-		C6H12	760-21-4	9.06	NA	0.9	NA	
Methylheptan-3-one, 5-	Amyl ethyl ketone	C8H16O	541-85-5	~9.1	0.56	0.77	0.88	
Methylhexan-2-one, 5-	MIAK, methyl isoamyl ketone	C7H14O	110-12-3	9.28	0.58	0.7	0.91	
Methylhydrazine		CH6N2	60-34-4	8.00	1.3	1.3	NA	
Methylmorpholine, N-		C5H11NO	109-02-4	~9.5	1.2	1.2	1.2	
Methylpent-3-en-2-one, 4-		C6H10O	141-79-7	9.10	1.1	0.6	0.66	
Methylpentan-2-ol, 4-	MIBC, methyl isobutylcarbinol	C6H14O	108-11-2	~9.8	0.68	1.4	3	
Methylpentane, 2-		C6H14	107-83-5	10.12	0.58	3.0	34	
Methylpentane, 3-		C6H14	96-14-0	10.08	0.64	2.5	24	
Methylpentane-2,4-diol, 2-	hexylene glycol	C6H14O2	107-41-5	~9.6	NA	4	NA	
Methylpropanoyl chloride, 2-		C4H7ClO	79-30-1	~9	1.8	8	40	
Methylpyrrole, N-		C5H7N	96-54-8	7.95	0.56	0.9	0.8	
Methylstyrene		C9H10	25013-15-4	8.30	1	0.5	0.5	
Methylthiopropional, 3-		C4H8OS	3268-49-3	~9.5	NA	2	NA	
Mineral oil			8042-47-5	~9	NA	0.8	0.7	
Mineral spirits	Stoddard solvent, Varsol, Viscor		64475-85-0	~9	0.39	0.8	0.7	
Monoisobutanolamine		C4H11NO	124-68-5	~9	NA	1.6	NA	
Morpholine		C4H9NO	110-91-8	8.88	1	4	2	S V X
Myrcene	7-methyl-3-methylene-1,6- octadiene	C10H16	123-35-3	~8.2	NA	0.5	NA	
Naphtha, heavy aromatic			64742-94-5	~9		0.4		
Naphtha, hydrotrated heavy		CnH(2n+2)	64742-48-9	~10	NA	1	NA	
Naphtha, light aromatic			64742-95-6	~9		0.5		
Naphtha, medium aliphatic			64742-88-7	~9		0.8		
Naphthalene		C10H8	91-20-3	8.14	0.4	0.4	0.4	
Naphthol methyl ether, 2-		C11H10O	93-04-9	~9	NA	0.5	NA	
Neon		Ne	09-01-7440	21.56	ZR	ZR	ZR	
Neopentane		C5H12	463-82-1	10.21	NA	3	NA	
Neopentyl alcohol		C5H12O	75-84-3	9.72	NA	2	NA	
Nitric oxide		NO	10102-43-9	9.27	2.8	8	NA	
Nitrobenzene		C6H5NO2	98-95-3	9.92	1.6	1.7	NA	
Nitroethane		C2H5NO2	79-24-3	10.88	2.4	ZR	ZR	
Nitrogen		N2	7727-37-9	15.58	NR	NR	NR	
Nitrogen dioxide		NO2	10102-44-0	9.58	4.5	13	14	
Nitrogen trifluoride		NF3	7783-54-2	12.97	NA	ZR	ZR	
Nitromethane		CH3NO2	75-52-5	11.08	2.71	ZR	ZR	
Nitropropane, 1-		C3H7NO2	108-03-2	10.81	NA	ZR	ZR	
Nitropropane, 2-		C3H7NO2	79-46-9	10.71	2	ZR	ZR	
Nitrous oxide		N2O	10024-97-2	12.89	NA	ZR	ZR	

Chemical Name	Alternative Name	Formula	CAS no.	IE, eV	Lamp Type (RF)			Notes
					11.7 eV	10.6eV	10eV	
N-Methylolacrylamide		C4H7NO2	924-42-5	~10.3	NA	2	ZR	
Nonanal		C9H18O	124-19-6	~9	1.3	1.3	NA	
Nonane		C9H20	111-84-2	9.72	0.4	1.4	4.7	
Methylstyrene		C9H10	25013-15-4	8.30	1	0.5	0.5	
Methylthiopropional, 3-		C4H8OS	3268-49-3	~9.5	NA	2	NA	
Mineral oil			8042-47-5	~9	NA	0.8	0.7	
Mineral spirits	Stoddard solvent, Varsol, Viscor		64475-85-0	~9	0.39	0.8	0.7	
Monoisobutanolamine		C4H11NO	124-68-5	~9	NA	1.6	NA	
Morpholine		C4H9NO	110-91-8	8.88	1	4	2	S V X
Myrcene	7-methyl-3-methylene-1,6- octadiene	C10H16	123-35-3	~8.2	NA	0.5	NA	
Naphtha, heavy aromatic			64742-94-5	~9		0.4		
Naphtha, hydrotrated heavy		CnH(2n+2)	64742-48-9	~10	NA	1	NA	
Naphtha, light aromatic			64742-95-6	~9		0.5		
Naphtha, medium aliphatic			64742-88-7	~9		0.8		
Naphthalene		C10H8	91-20-3	8.14	0.4	0.4	0.4	
Naphthol methyl ether, 2-		C11H10O	93-04-9	~9	NA	0.5	NA	
Neon		Ne	09-01-7440	21.56	ZR	ZR	ZR	
Neopentane		C5H12	463-82-1	10.21	NA	3	NA	
Neopentyl alcohol		C5H12O	75-84-3	9.72	NA	2	NA	
Nitric oxide		NO	10102-43-9	9.27	2.8	8	NA	
Nitrobenzene		C6H5NO2	98-95-3	9.92	1.6	1.7	NA	
Nitroethane		C2H5NO2	79-24-3	10.88	2.4	ZR	ZR	
Nitrogen		N2	7727-37-9	15.58	NR	NR	NR	
Nitrogen dioxide		NO2	10102-44-0	9.58	4.5	13	14	
Nitrogen trifluoride		NF3	7783-54-2	12.97	NA	ZR	ZR	
Nitromethane		CH3NO2	75-52-5	11.08	2.71	ZR	ZR	
Nitropropane, 1-		C3H7NO2	108-03-2	10.81	NA	ZR	ZR	
Nitropropane, 2-		C3H7NO2	79-46-9	10.71	2	ZR	ZR	
Nitrous oxide		N2O	10024-97-2	12.89	NA	ZR	ZR	
N-Methylolacrylamide		C4H7NO2	924-42-5	~10.3	NA	2	ZR	
Nonanal		C9H18O	124-19-6	~9	1.3	1.3	NA	
Nonane		C9H20	111-84-2	9.72	0.4	1.4	4.7	
Nonanol (mixed isomers)		C9H20O	143-08-8	~9.8	NA	1.2	NA	
Nonene (mixed isomers)		C9H18	27215-95-8	~9.3	NA	0.6	NA	
Nonene, 1-		C9H18	124-11-8	~9.4	NA	0.6	NA	
Norbomadiene, 2,5-		C7H8	121-46-0	8.38	0.52	0.6	0.70	
Octalactone, gamma-		C8H14O	104-50-7	~9	4	3	NA	
Octamethylcyclotetrasiloxane		C6H12O4Si4	556-67-2	~10	NA	0.3	NA	
Octamethyltrisiloxane		C8H24O2Si3	107-51-7	10.04	NA	0.3	NA	
Octane		C8H18	111-65-9	9.80	0.44	1.6	7	
Octanol (mixed isomers)	capryl alcohol, octyl alcohol	C8H18O	111-87-5	~9.8	NA	1.5	NA	
Octene (mixed isomers)		C8H16	25377-83-7	~9.4	NA	0.7	NA	
Octene, 1-		C8H16	111-66-0	9.43	0.43	0.7	1.1	
Oxalonitrile		C2N2	460-19-5	13.57	NA	ZR	ZR	
Oxalyl bromide		C2Br2O2	15219-34-8	10.49	NA	5	ZR	
Oxydiethanol, 2,2'-	diethylene glycol	C4H10O3	111-46-6	~10.3	NA	2	ZR	
Oxygen		O2	7782-44-7	12.07	NA	ZR	ZR	

Chemical Name	Alternative Name	Formula	CAS no.	IE, eV	Lamp Type (RF)			Notes
					11.7 eV	10.6eV	10eV	
Ozone		O3	10028-15-6	12.52	NA	ZR	ZR	
Paraffin wax, fume			8002-74-2	~10	NA	1	NA	
Paraffins, normal			64771-72-8	~9.5	1	1	NA	
Paraldehyde		C6H12O3	123-63-7	~9.7	0.75	2.2	4.8	
Pentacarbonyl iron		FeC5O5	13463-40-6	~8	NA	1	NA	
Pentachloroethane		C2HCl5	76-01-7	11.28	NA	ZR	ZR	
Pentachlorofluoroethane		C2Cl5F	354-56-3	~11.8	NA	ZR	ZR	
Pentafluoroethane		C2HF5	354-33-6	~12.5	NA	ZR	ZR	
Pentan-2-one	MPK, methyl propyl ketone	C5H10O	107-87-9	9.38	0.9	0.99	1.03	
Pentan-3-one	diethyl ketone	C5H10O	96-22-0	9.31	1	0.77	0.75	
Pentanal	pentyl aldehyde	C5H10O	110-62-3	9.74	0.7	1.5	1.75	
Pentandione, 2,4-	acetyl acetone	C5H8O2	123-54-6	8.85	0.72	1.2	0.85	
Pentane		C5H12	109-66-0	10.35	0.70	7	ZR	
Pentanoic acid		C5H10O2	109-52-4	10.53	1.6	8.0	52	
Pentanol, 2-		C5H12O	6032-29-7	9.78	1	2.0	16	
Pentanol, 3-		C5H12O	584-02-1	9.76	0.9	1.7	3.5	
Pentene, 1-		C5H10	109-67-1	9.49	0.63	0.92	1.00	
Pentylcyclopentan-1-one, 2-		C10H18O	4819-67-4	~9	NA	1.0	NA	
Pentylcyclopentane		C10H20	3741-00-2	9.91	NA	1.1	NA	
Pentyne, 1-		C5H8	627-19-0	10.10	NA	3	NA	
Peracetic acid		C2H4O3	79-21-0	~10.5	NA	NA	ZR	
Perchloryl fluoride	chlorine oxyfluoride	ClO3F	7616-94-6	13.60	NA	ZR	ZR	
Perfluorobutadiene	hexafluorobutadiene	C4F6	685-63-2	9.50	NA	3	NA	
Perfluorocyclobutane		C4F8	115-25-3	13.50	ZR	ZR	ZR	
Perfluoropropane		C3F8	76-19-7	13.38	NA	ZR	ZR	
Perfluoro-tert-butylamine		C4H2F9N	2809-92-9	10.40	NA	5	ZR	
Petroleum ether	Ligroin, VM&P naphtha, benzine		8032-32-4	~10	1	0.9	NA	
Phellandrene		C10H16	99-83-2	~8.2	NA	0.8	NA	
Phenethyl methyl ether, 2-		C9H12O	3558-60-9	~9	NA	0.6	NA	
Phenol	hydroxybenzene	C6H6O	108-95-2	8.51	0.9	0.9	1.1	
Phenoxyethanol, 2-		C8H10O2	122-99-6	~8.5	6	4.5	10	S
Phenyl chloroformate		C7H5ClO2	1885-14-9	~9	NA	1.1	NA	
Phenyl ethyl isobutyrate, 2-		C12H16O2	103-48-0	~9	NA	1.5	NA	
Phenyl propene, 2-		C9H10	98-83-9	8.35	NA	0.4	0.4	
Phenyl-2,3-epoxypropyl ether	PGE	C9H10O2	122-60-1	~8.6	NA	0.8	NA	
Phenylacetaldehyde		C8H8O	122-78-1	8.80	NA	0.7	NA	
Phenylacetic acid		C8H8O2	103-82-2	8.26	NA	1	NA	
Phenylcyclohexane		C12H16	827-52-1	8.10	NA	0.4	NA	
Phenylethyl acetate, 1-		C10H12O2	93-92-5	~9	NA	0.7	NA	
Phenylethyl alcohol, 2-		C8H10O	60-12-8	~10	NA	1.2	NA	
Phosgene		COCl2	75-44-5	11.55	2.1	ZR	ZR	
Phosphine		PH3	7803-51-2	9.96	1.4	2	NA	
Phthalonitrile		C8H5N2	91-15-6	9.90	NA	1.2	NA	
Picoline, 3-	3-methylpyridine	C6H7N	108-99-6	9.04	0.73	0.7	0.8	
Pine oil		N/A	8002-09-3	~9.5	NA	1.0	NA	
Pinene		C10H16	80-56-8	8.07	0.4	0.4	0.4	
Pinene, α-		C10H16	2437-95-8	8.07	0.43	0.34	0.48	

Chemical Name	Alternative Name	Formula	CAS no.	IE, eV	Lamp Type (RF)			Notes
					11.7 eV	10.6eV	10eV	
Pinene, β-		C10H16	127-91-3	8.10	0.46	0.5	0.59	
Piperazine	1,4-diazacyclohexane	C4H10N2	110-85-0	8.72	NA	0.8	NA	
Piperidine	azacyclohexane	C5H11N	110-89-4	8.03	NA	1	0.8	S X
Piperylene	1,3-pentadiene	C5H8	504-60-9	8.60	0.8	0.9	1.0	
Prop-2-yn-1-ol	propargyl alcohol	C3H4O	107-19-7	10.50	0.93	3.7	ZR	
Propadiene	allene	C3H4	463-49-0	9.83	NA	1.0	NA	
Propan-1-ol		C3H8O	71-23-8	10.20	1.60	5.4	40	
Propanamide		C3H7NO	79-05-0	~9.5	NA	2	NA	
Propane		C3H8	74-98-6	11.07	1.8	ZR	ZR	
Propane-1,2-diol	propylene glycol	C3H8O2	57-55-6	10.00	NA	3	NA	
Propanolamine		C3H9NO	156-87-6	~9.5	NA	1.5	NA	S V X
Propargyl chloride	3-chloro-1-propyne	C3H3Cl	624-65-7	9.82	0.64	8.4	ZR	
Propen-1-imine, 2-		C3H5N	73311-40-7	9.65	NA	2	NA	S V X
Propene	propylene	C3H6	115-07-1	9.73	1	1.4	2	
Propionic acid	2-propynoic acid	C3H2O2	471-25-0	10.45	NA	8	ZR	
Propionaldehyde	propanal, propional	C3H6O	123-38-6	9.95	2	1.7	NA	
Propionic acid		C3H6O2	79-09-4	10.44	4	10	ZR	
Propionitrile		C3H5NO	107-12-0	11.50	5	ZR	ZR	
Propoxy-2-propanol, 1-		C6H14O2	1569-01-3	~9.5	0.7	1.2	1.6	
Propyl acetate, n-		C5H10O2	109-60-4	10.04	1	3.0	17	
Propyl butanoate		C7H14O2	105-66-8	~9.6	0.76	1.3	2.7	
Propyl formate		C4H8O2	110-74-7	10.54	1.4	19	ZR	
Propyl iodide	Iodopropane	C3H7I	107-08-4	9.26	NA	1.0	NA	
Propyl mercaptan		C3H8S	107-03-9	9.15	0.8	1.0	0.92	
Propylamine, n-		C3H9N	107-10-8	8.50	NA	1.1	NA	S X
Propylbenzene	includes cumene	C9H12	103-65-1	8.72	0.47	0.5	0.55	
Propylbenzene (all isomers)		C9H12	74296-31-4	8.70	NA	0.5	NA	
Propylbenzene, 2-		C9H12	98-82-8	8.71	0.54	0.6	0.7	
Propylene carbonate		C4H6O3	108-32-7	~10.5	2.6	15	ZR	
Propylene dinitrate		C3H6N2O6	6423-43-4	~11	NA	ZR	ZR	
Propylene glycol ethyl ether acetate	PGEEA	C7H14O3	98516-30-4	~9.6	NA	1.2	NA	
Propylene oxide		C3H6O	75-56-9	10.22	1.6	6	ZR	
Propyleneimine	2-methylaziridine	C3H7N	75-55-8	9.00	1	1.4	NA	S X
Propylnitrate, n-		C3H7NO3	627-13-4	11.07	2	ZR	ZR	
Propyne	methylacetylene	C3H4	74-99-7	10.36	NA	4	ZR	
Pyrazine		C4H4N2	290-37-9	9.29	NA	3	NA	
Pyridine		C5H5N	110-86-1	9.25	0.9	0.7	0.87	
Pyridinol, 4-		C5H5NO	626-64-2	9.75	NA	3	NA	
Pyridylamine, 2-		C5H6N2	504-29-0	8.10	NA	0.8	NA	
Pyrrole		C4H5N	109-97-7	8.02	0.98	1.4	1.1	
Pyrrolidine		C4H9N	123-75-1	8.77	1.3	4	20	S V X W!
Pyruvaldehyde		C3H4O2	78-98-8	9.60	NA	0.7	NA	
Rose oxide, cis-		C10H18O	16409-43-1	~9	NA	0.8	NA	
Sec-amyl acetate		C7H14O2	626-38-0	~9.9	NA	5	NA	
Sevoflurane	1,1,1,3,3,3-hexafluoro-2- (fluoromethoxy)propane	C3H3F7O	28523-86-6	11.00	2	ZR	ZR	
Silane		SiH4	7803-62-5	11.00	NA	ZR	ZR	
Stibine	vinylbenzene	SbH3	7803-52-3	9.89	NA	1.5	NA	

Chemical Name	Alternative Name	Formula	CAS no.	IE, eV	Lamp Type (RF)			Notes
					11.7 eV	10.6eV	10eV	
Styrene		C8H8	100-42-5	8.40	0.50	0.45	0.52	
Sulfur dichloride		Cl2S	10545-99-0	9.47	NA	2	NA	
Sulfur dioxide		SO2	7446-09-5	12.30	1.3	ZR	ZR	
Sulfur hexafluoride		SF6	2551-62-4	19.30	NA	ZR	ZR	
Sulfur tetrafluoride		SF4	7783-60-0	12.63	NA	ZR	ZR	
Sulfuryl fluoride		SO2F2	2699-79-8	13.04	NA	ZR	ZR	
TAC	Total Aromatic Hydrocarbons			~9	NA	NA	0.5	
Terpineol, α-		C10H18O	98-55-5	~9	NA	0.8	NA	
Terpinolene		C10H16	586-62-9	8.10	0.70	0.6	0.9	
Terpinyl acetate, α-		C12H20O2	80-26-2	~9	NA	1.2	NA	
Terpinyl methyl ether, alpha-		C11H20O	14576-08-0	~9	0.8	0.7	NA	
Tert-amyl methyl ether		C6H14O	994-05-8	~9	NA	0.8	NA	
Tert-butanol	t-butyl alcohol	C4H10O	75-65-0	10.25	1.01	1.6	2.8	
Tert-butyl acetate		C6H12O2	540-88-5	~9.7	0.83	1.05	1.65	
Tert-butyl bromide		C4H9Br	507-19-7	9.92	0.64	0.99	1.6	
Tert-butyl formate	2-methyl-2-bromopropane	C5H10O2	762-75-4	10.52	NA	8	ZR	
Tetrabromoethane, 1,1,2,2-		C2H2Br4	79-27-6	~10	NA	2	NA	
Tetracarbonylnickel	nickel tetracarbonyl	NiC4O4	13463-39-3	8.28	NA	1	NA	
Tetrachloro-1,2-difluoroethane, 1,1,2,2-		C2Cl4F2	76-12-0	11.30	NA	ZR	ZR	
Tetrachloro-1-fluoroethane, 1,1,2,2-		C2HCl4F	354-14-3	~11	NA	ZR	ZR	
Tetrachloro-2,2-difluoroethane, 1,1,1,2-		C2Cl4F2	76-11-9	~11	NA	ZR	ZR	
Tetrachloro-2-fluoroethane, 1,1,1,2-		C2HCl4F	354-11-0	~11	NA	ZR	ZR	
Tetrachloroethane, 1,1,1,2-		C2H2Cl4	630-20-6	11.10	0.6	ZR	ZR	
Tetrachloroethane, 1,1,2,2-	R-130	C2H2Cl4	79-34-5	11.10	0.2	ZR	ZR	
Tetrachloroethylene	PCE, perchloroethylene	C2Cl4	127-18-4	9.33	0.15	0.4	0.33	
Tetrachloropyridine, 2,3,5,6-		C5HNCI4	2402-79-1	~9	NA	1	NA	
Tetraethyl orthosilicate	TEOS, ethyl orthosilicate, ethyl silicate	C8H20O4Si	78-10-4	9.77	1.0	3	3	W!
Tetraethyllead	TEL	C8H20Pb	78-00-2	11.10	0.2	ZR	ZR	
Tetrafluoroethane, 1,1,1,2-		C2H2F4	811-97-2	~12.2	ZR	ZR	ZR	
Tetrafluoroethane, 1,1,2,2-		C2H2F4	359-35-3	~12.2	ZR	ZR	ZR	
Tetrafluoroethylene	R-1114	C2F4	116-14-3	10.12	1	15	NA	
Tetrafluoromethane	Carbon tetrafluoride	CF4	75-73-0	15.30	ZR	ZR	ZR	
Tetrahydrofuran	THF	C4H8O	109-99-9	9.41	1.4	2.3	2.8	
Tetrahydronaphthalene	Tetralin	C10H12	119-64-2	8.46	NA	0.4	NA	
Tetrahydropyran		C5H10O	142-68-7	9.25	0.9	1.5	1.5	
Tetrahydrothiophene	Thiolane	C4H8S	110-01-0	8.38	0.46	0.7	0.5	
Tetramethyl orthosilicate	TMOS, methyl orthosilicate, methyl silicate	C4H12O4Si	681-84-5	~10	NA	2	NA	W!
Tetramethyl succinonitrile	TMSN	C8H12N2	3333-52-6	~11	1	NA	NA	
Tetramethylbenzene (all isomers)		C10H14	95-93-2	8.06	NA	0.3	NA	
Tetramethylbutane, 2,2,3,3-		C8H18	594-82-1	9.80	NA	1	NA	
Tetramethyldisiloxane, 1,1,3,3-		C4H14OSi2	3277-26-7	~9	0.5	0.7	1.1	
Tetramethylgermane		C4H12Ge	865-52-1	9.34	NA	2	NA	
Tetramethylguanidine, N,N,N',N'		C5H13N3	80-70-6	8.43	0.8	0.6	NA	
Tetramethylsilane	TMS	C4H12Si	75-76-3	9.80	NA	2	NA	
Thioacetic acid		C2H4OS	507-09-5	10.00	NA	2	NA	
Thioanisole		C7H8S	100-68-5	7.94	0.5	0.6	0.7	
Thiocarbonyl fluoride		CSF2	420-32-6	10.45	NA	6	ZR	

Chemical Name	Alternative Name	Formula	CAS no.	IE, eV	Lamp Type (RF)			Notes
					11.7 eV	10.6eV	10eV	
Thiocyanogen		C2S2N2	505-14-6	10.50	NA	8	ZR	
Thioformaldehyde trimer		C3H6S3	291-21-4	9.35	NA	1.5	NA	
Thionyl chloride		SOCI2	7719-09-7	10.96	NA	ZR	ZR	
Thiophene		C4H4S	110-02-1	8.86	0.53	0.46	0.4	
Thiophosgene		CSCI2	463-71-8	9.61	NA	1	NA	
Thymol		C10H14O	89-83-8	~9	NA	0.7	NA	
Titanium-n-propoxide		C12H28O4Ti	3087-37-4	~9	NA	3	NA	
Toluene		C7H8	108-88-3	8.82	0.55	0.56	0.60	
Toluene-2,4-diisocyanate	TDI	C9H6N2O2	584-84-9	8.82	2	1.6	NA	
Toluenesulfonyl chloride, p-	tosyl chloride	C7H7SO2Cl	98-59-9	~9	NA	3	NA	
Toluidine, o-	2-aminotoluene	C7H9N	95-53-4	7.40	1	0.5	NA	
Tolylaldehyde, p-		C8H8O	104-87-0	9.33	NA	0.8	NA	
Triazine, 1,3,5-		C3H3N3	290-87-9	10.01	NA	6	NA	
Tributyl phosphate		C12H27O4P	126-73-8	8.91	NA	5	NA	
Tributylamine		C12H27N	102-82-9	7.40	0.6	1	ZR	S X
Trichloro-1,1-difluoroethane, 1,2,2-		C2HCl3F2	354-21-2	11.00	NA	ZR	ZR	
Trichloro-1,2-difluoroethane, 1,1,2-		C2HCl3F2	354-15-4	~11	NA	ZR	ZR	
Trichloro-2,2-difluoroethane, 1,1,1-		C2HCl3F2	354-12-1	~11	NA	ZR	ZR	
Trichloro-2-fluoroethane, 1,1,2-	R 131	C2H2Cl3F	359-28-4	~11	1	ZR	ZR	
Trichlorobenzene, 1,2,4-		C6H3Cl3	120-82-1	9.04	NA	0.6	0.5	
Trichloroethane, 1,1,1-	1,1,1-TCA, R-140	C2H3Cl3	71-55-6	11.00	1	ZR	ZR	
Trichloroethane, 1,1,2-	1,1,2-TCA, R-140a	C2H3Cl3	79-00-5	11.00	0.8	ZR	ZR	
Trichloroethylene	TCE, R-1120	C2HCl3	79-01-6	9.45	0.5	0.6	0.8	
Trichlorofluoromethane		CCl3F	75-69-4	11.77	NA	ZR	ZR	
Trichloronitromethane		CCl3NO2	76-06-2	~13	NA	ZR	ZR	
Trichloropropane 1,2,3-		C3H5Cl3	96-18-4	~11	0.64	ZR	ZR	
Trichlorotrifluoroethane, 1,1,1-	R-113a	C2Cl3F3	354-58-5	11.50	2	ZR	ZR	
Trichlorotrifluoroethane, 1,1,2-	R-113	C2Cl3F3	76-13-1	11.99	2	ZR	ZR	
Triethyl borate		C6H15O3B	150-46-9	10.13	1.2	5	ZR	
Triethyl phosphate		C6H15P04	78-40-0	9.79	NA	3.5	NA	
Triethyl phosphite		C6H15O3P	122-52-1	8.30	NA	1.5	NA	
Triethyl silane		C6H16Si	617-86-7	9.50	NA	2	NA	
Triethylamine	TEA	C6H15N	121-44-8	7.50	0.7	1.3	1.1	S V
Triethylbenzene		C12H18	25340-18-5	~8.3	NA	0.4	NA	
Triethylene aluminum		C6H15Al	97-93-8	~10	NA	1	NA	
Trifluoroacetic acid	TFAA	C2HO2F3	76-05-1	11.46	NA	NR	ZR	
Trifluoroethane, 1,1,2-	R-143	C2H3F3	430-66-0	12.90	34	ZR	ZR	
Trifluoroethanol, 2,2,2-		C2H3F3O	75-89-8	~13	34	ZR	ZR	
Trifluoroethene	trifluoroethylene	C2HF3	359-11-5	10.14	NA	5	NA	
Trifluoroethyl methyl ether, 2,2,2-	trifluoroethyl methyl ether	C3H5F3O	460-43-5	10.53	NA	10	ZR	
Trifluoroiodomethane		CF3I	2314-97-8	10.28	NA	2	NA	
Trifluoromethane	fluoroform	CHF3	75-46-7	13.86	NA	ZR	ZR	
Trimethoxymethane		C4H10O3	149-73-5	9.50	0.71	4	10	V
Trimethoxyvinylsilane		C5H12O3Si	2768-02-7	~9.5	0.53	2.0	ZR	
Trimethyl phosphate		C3H9O4P	512-56-1	10.00	3	4	50	S V X
Trimethylamine		C3H9N	75-50-3	7.82	0.3	0.5	0.5	S V X
Trimethylbenzene mixtures	mesitylene	C9H12	25551-13-7	8.41	0.3	0.3	0.3	

Chemical Name	Alternative Name	Formula	CAS no.	IE, eV	Lamp Type (RF)			Notes
					11.7 eV	10.6eV	10eV	
Trimethylbenzene, 1,2,4-		C9H12	95-63-6	0.00	0.46	0.6	0.6	
Trimethylbenzene, 1,3,5-		C9H12	108-67-8	8.39	0.4	0.4	0.5	
Trimethylborate		C3H9BO3	121-43-7	10.00	1	NA	NA	
Trimethylcyclohexane, 1,2,4-		C9H18	2234-75-5	9.35	NA	1.0	NA	
Trimethylene oxide		C3H6O	503-30-0	9.65	NA	1.5	NA	
Trimethylsilane		C3H10Si	993-07-7	9.90	NA	1	NA	
Trioxane	formaldehyde trimer	C3H6O3	110-88-3	10.30	NA	2	ZR	
Tropathiane		C8H16OS	67715-80-4	0.00	0.3	0.46		
Tungsten hexafluoride		WF6	7783-82-6	15.53	ZR	ZR	ZR	
Turpentine		C10H16	9005-90-7	~8.5	NA	0.6	NA	
Turpentine oil	Pinenes	C10H16	8006-64-2	~8	1	0.6	0.5	
TVOC	Total Volatile Organic Compounds			~10	1	1	1	
Undecane		C11H24	1120-21-4	9.56	0.4	1.1	3.1	
Vanillin		C8H8O3	121-33-5	~9	NA	1	NA	
Vinyl acetate		C4H6O2	108-05-4	9.19	1.0	1.5	1.77	
Vinyl bromide	bromoethene	C2H3Br	593-60-2	9.80	NA	1.5	0.9	
Vinyl chloride	chloroethene	C2H3Cl	75-01-4	9.99	0.6	2.1	1.9	
Vinyl ethyl ether		C4H8O	109-92-2	8.98	0.8	1.0	0.95	
Vinyl fluoride	fluoroethene	C2H3F	75-02-5	10.37	NA	2	ZR	
Vinyl-2-pyrrolidinone, 1-	NVP	C6H9NO	88-12-0	9.00	2.7	4.5	3.3	
Vinylcyclohexene	butadiene dimer	C8H12	100-40-3	8.93	0.44	0.47	0.7	
Vinylene carbonate		C3H2O3	872-36-6	10.08	1.7	3.5	5	
Vinylidene difluoride	vinylidene fluoride	C2H2F2	75-38-7	10.29	NA	5	NA	
Vinylsilane		C2H6Si	7291-09-0	10.10	NA	1.5	NA	
Water	dihydrogen monoxide	H2O	7732-18-5	12.61	ZR	ZR	ZR	
Xenon		Xe	7440-63-3	12.13	ZR	ZR	ZR	
Xylene mixed isomers	dimethylbenzenes	C8H10	1330-20-7	8.56	0.49	0.54	0.59	
Xylene, m-		C8H10	108-38-3	8.56	0.46	0.5	0.53	
Xylene, o-		C8H10	95-47-6	8.56	0.52	0.5	0.6	
Xylene, p-		C8H10	106-42-3	8.44	0.51	0.55	0.59	
Xylidine, all		C8H11N	1300-73-8	7.50	NA	0.7	0.6	

\* Ionization energies were primarily sourced from P.J. Linstrom and W.G. Mallard, Eds., **NIST Chemistry WebBook, NIST Standard Reference Database Number 69**, National Institute of Standards and Technology, Gaithersburg MD, 20899, <http://webbook.nist.gov>, (retrieved and updated from June 19, 2014).