
R **TRA-TRA** ΤI U S С Ρ Ρ Ε L A T R С Þ Ο Ο Ο Α С



ULTRA-TRAC® APL finds unmarked underground pipe fast and accurately!

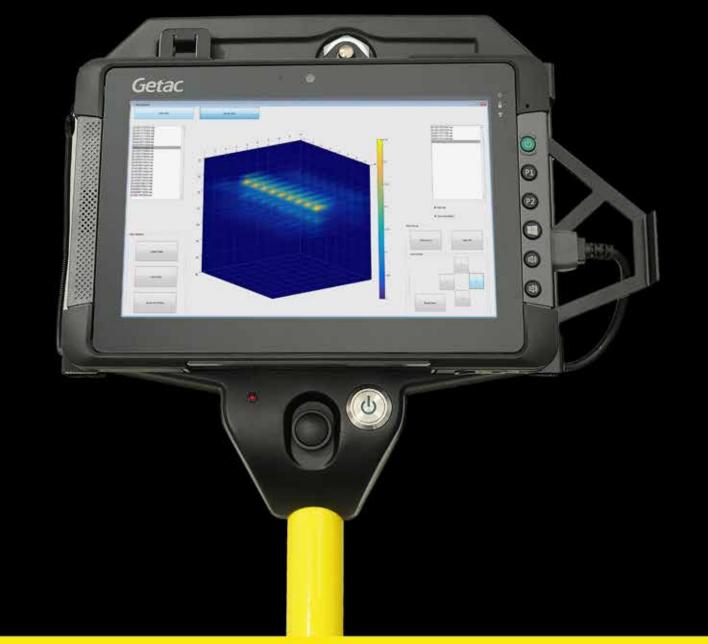

Innovative Detection Solutions

www.gasleaksensors.com


MADE IN THE USA

ULTRA-TRAC® APL

Acoustic Pipe Locator (APL) finds unmarked underground pipe, reducing potential third party damages.


ULTRA-TRAC[®] APL is the perfect choice for accurately locating unmarked buried piping systems. APL finds plastic pipe systems and other pipelines with broken or missing tracer wire. Natural gas, water and sewer laterals are easily traced with no system access required!

The APL Tablet application processes and converts acoustic data into a graphical format to determine pipe location.

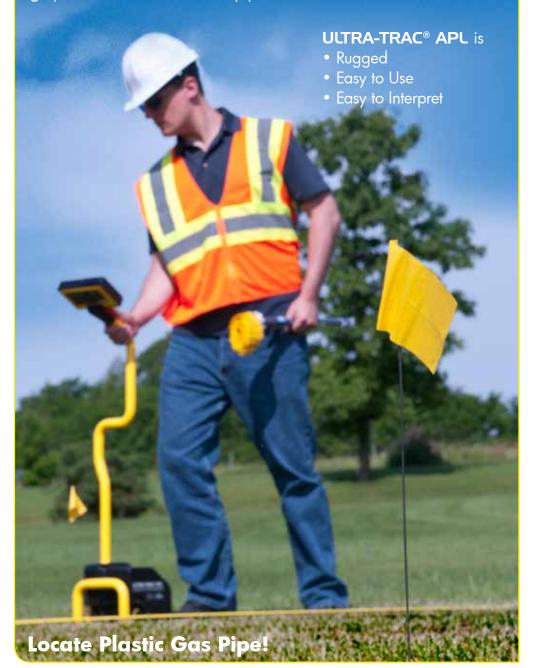

Standard Features:

- Large Graphic Display
- 25 Hour Recharge Battery Life
- Compact Storage

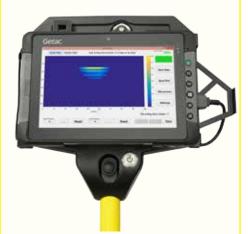

Types of Materials Located: • Plastic Pipe

• Gas Piping

- Gathering Lines
- Sewer Laterals
- Water Lines
- Drainage Lines
- Electrical Conduit
- Ductile Iron • Clay Tile • And more

• Cast Iron

• Metallic Pipe

• Concrete Pipe

• Fiber Optic Conduit



Soil Types & Coverings: Concrete

- Grass Asphalt
- And more
- Gravel





DETECTION SPECIFICATIONS

Optimal Detection Range

Locates 1/2" pipe at a depth of 12" to 30." Locates 2" pipe at a depth of 12" to 48." Locates 4" pipe at a depth of 12" to 96."

The APL will not detect objects less than 12'' deep. Accuracy is within $\pm 18''$ plus the selected slice distance from pipe location Detects any pipe material (Does not indicate type of pipe or size of pipe)

SPECIFICATIONS

| Size (inches): Weight: Operational Temp: - Storage Temp: | Handle 48; Base 20" X 10" X 10" (L x W x H) 26 LBS 4°F to 122°F (-20°C to 50°C) -20°F to 140°F (-29°C to 60°C) |
|---|---|
| Battery life: | Base: 25 hours Tablet: 6 hours |
| Battery Type: | Base: 16vdc Lithium-ion Tablet: 7.4vdc Lithium-ion |
| Recharge Time: | Base: 10 hours Tablet: 3 hour |
| Time Per Slice: Time Per 20 Slice Scan: | <2 seconds <2 minutes |



STANDARD KIT

ULTRA-TRAC APL Carrying Case Recharge Adapter Measuring Tape Instruction Manual Quick Start Guide


ULTRA-TRAC[®] APL Replacement Part Numbers

| Carrying Case | Part # 872-00016 |
|---------------------------------|------------------|
| Recharge Wall Adapter | Part # 871-00029 |
| Measuring Tape | Part # 360-00342 |
| APL Instruction Manual | Part # 750-00072 |
| APL Quick Start Guide | Part # 750-00073 |
| APL Tablet PC | Part # 360-00487 |
| Tablet Support Bracket Assembly | Pasrt #870-00087 |
| USB Cable | Part # 360-00500 |
| APL Dampening Pads | Part # 320-00061 |
| Actuator Plate | Part # 360-00326 |
| Acceleromter Housing | Part # 360-00320 |

ULTRA-TRAC® APL - Quick Start Instructions

- Press and Hold the APL power button until the light begins to flash. Once initialized, the APL power button will glow solid green.
- 2. Power on the tablet by pressing the tablet power button.
- The APL application will automatically start. When loading, the SENSIT logo will be displayed.
- 4. Click the grey "Connect to APL" button. Once connected, the button will turn green.
- 5. On the bottom right hand corner of the screen, select job settings based on site conditions.
- 6. Select surface type; Hard or Soft. Site conditions will determine the proper setting. If unsure, consult the manual.
- Select the suspected depth of the target line, based on system knowledge. If between 12" and 5' deep, select Normal mode. If the line is suspected to be greater than 5' in depth, select Deep.
- 8. Select scan direction. If stepping to the left, click the left arrow. If stepping to the right, click the right arrow.
- Select step distance; either 6" or 12". If no known surface structures are present, select 12". If scanning at a surface structure, select 6" for a high resolution scan. (6" interval is used for a higher resolution scan and is recommended for most applications.)
- 10. When the menu displays "Ready for reading," the APL is ready to collect data. User settings will be displayed at the top of the screen. The APL is now ready to begin a scan.

Instruction Videos available at www.gasleaksensors.com

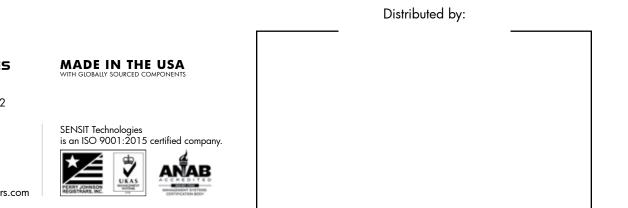



851 Transport Drive Valparaiso, IN 46383-8432

Phone: 888 4SENSIT 888 473 6748 219 465 2700

Fax: 219 465 2701 www.gasleaksensors.com

